

Trust Joyfighter 100 Plus

User's Manual

Copyright Statement

No part of this manual may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the prior written permission of the manufacturer.

Disclaimer Statement

The manufacturer specifically disclaims all warranties, either express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the software, the product manual(s) and written materials, and any other accompanying hardware. The manufacturer reserves the right to revise or make improvements to its product at any time and without obligation to notify any person of such revisions or improvements.

In no event shall the manufacturer be liable for any consequential or incidental damages, including any loss of business profits or any other commercial damages, arising out of the use of its product.

* All company or product names are trademarks or registered trademarks or service marks of their respective owners.

Table of Contents

Introduction	4
Chapter 1 - Installation of the Joyfighter	6
1.1 One Joystick	6
1.2 Two joysticks using a Y-connector	6
1.3 Centring your Joystick	7
1.4 Action Buttons.....	7
Chapter 2 - Troubleshooting	8
2.1 Problems and solutions	8
2.1.1 If your joystick doesn't respond.....	8
2.1.2 The joystick cursor cannot maintain its centre position or the cursor will not move in one direction.....	8
2.1.3 The button works in one program but not in another	9
2.2 Cleaning.....	9

Introduction

Thank you for purchasing the Trust Joyfighter 100 Plus Control Stick, which supports high-end game software on PC. This manual is a guide to the installation and use of the joystick.

Chapter 1 explains how to install the Trust Joyfighter 100 Plus.

Chapter 2 gives solutions to problems.

Features & Benefits

- Compatible with any personal computer.
- The Trust Joyfighter 100 Plus features several advanced ergonomic aspects that provide you with the most comfortable joystick possible.
- For handheld use, the base is contoured to fit comfortably in the grasp of your hand.
- High quality rubber suction cups will secure the Trust Joyfighter 100 Plus firmly in place on any smooth surface.
- Positive-response fire buttons with turbo function will help you to win any game.
- The 2 meter cable provides full operating space.
- High quality 15-pin connector to be firmly connected into your game port.

Compatibility

Hardware

- Personal computer equipped with a joystick port.

Note

Joystick ports are available on game cards and on enhanced sound cards.

Software

- Any joystick-supported software written for your PC.

Chapter 1 - Installation of the Joyfighter

1.1 One Joystick

1. Turn off the power to your computer.
2. Plug The Trust Joyfighter 100 Plus connector into the 15-pin joystick port located on your game card or enhanced sound card. The Trust Joyfighter 100 Plus can be plugged into either joystick Port A or Port B.
3. Turn the computer on and start your software program.
4. Select "Joystick" from the option menu.

1.2 Two joysticks using a Y-connector

1. Turn your computer off.
2. Attach the Trust Joyfighter 100 Plus to one of the two joystick ends of the Y-connector.
3. Attach the second joystick to the other joystick connector of the Y-connector.
4. Attach the Y-connector plug into the 15-pin joystick port.
5. Turn the computer on and start your software program.
6. Select "2 Joysticks" from the option menu.

1.3 Centring your Joystick

1. Turn off your computer before you connect your joystick to your computer, or your computer may not be able to detect it.
2. Before connecting your joystick to your computer, make sure you have only one game port (15-pin female connector) or one game card with multiple game ports. Otherwise, your joystick will not function properly. Should you have more than one game port, disable either one. You may need to consult your owners' manual or computer manufacturer for disabling procedures.
3. Unlike other pointing devices, the Trust Joyfighter 100 Plus doesn't require driver software. As long as your game port functions properly, your joystick should work automatically once you plug it in.
4. Before you start your game, adjust the trimmer controls at the base of the joystick to the centre position. This trimmers adjust the horizontal (X) and vertical (Y) positions.
5. Certain games may require you to specify that you are using the joystick as control device, and some games will have an option of centring the joystick. Follow the instructions in your game manual for such installation or configuration procedures. If the object you want to control moves to one direction when the joystick is in the central position, adjust the "X" or "Y" trimmer to the opposite direction until you have the best setting.

1.4 Action Buttons

Four independent fire buttons are located on the Control Stick. The exact function each fire button activates depends on your software program. Consult your software manual for a description of each fire button. Some software programs utilize only one or two fire buttons.

Chapter 2 - Troubleshooting

2.1 Problems and solutions

2.1.1 *If your joystick doesn't respond*

1. Make sure only one game port is enabled.
2. If you have a sound card with a joystick interface, disable it and use the connector already on the PC.
3. Check your sound card manual for instructions.
4. Check whether you have a defective Y-connector.
5. If you are using an Y-connector with the Trust Joyfighter 100 Plus, disconnect it and connect the joystick directly to the game port.
6. Change the I/O address of the card that is conflicting with the game card, or remove this card.

2.1.2 *The joystick cursor cannot maintain its centre position or the cursor will not move in one direction*

1. Make sure you have calibrated the Trust Joyfighter 100 Plus for the game you are using.
2. Make sure you have set the trim controls to their centre position.
3. Check if you have used another joystick in your system prior to replacing it with Trust Joyfighter 100 Plus. Your game might need recalibration then.

2.1.3 *The button works in one program but not in another*

1. Each time you switch games, the function of the Trust Joyfighter 100 Plus's buttons may also change.
2. Refer to the game's instruction manual, learn how to assign functions.

2.2 Cleaning

1. Keep the Trust Joyfighter 100 Plus free of dust by wiping the surface with a dry, soft cloth.
2. If the Trust Joyfighter 100 Plus should require cleaning, wipe it with a cloth slightly dampened with clean water.
3. Never immerse the Trust Joyfighter 100 Plus in any liquid.