

Trust Imagery 9600 Easy Connect

User's Manual

Copyright Statement

No part of this manual may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the prior written permission of the manufacturer.

Disclaimer Statement

The manufacturer specifically disclaims all warranties, either express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the software, the product manual(s) and written materials, and any other accompanying hardware. The manufacturer reserves the right to revise or make improvements to its product at any time and without obligation to notify any person of such revisions or improvements.

In no event shall the manufacturer be liable for any consequential or incidental damages, including any loss of business profits or any other commercial damages, arising out of the use of its product.

* All company or product names are trademarks or registered trademarks or service marks of their respective owners.

Table of Contents

FCC Information.....	ii
Chapter 1: Installation.....	1
1.1 Contents of Scanner Package	1
1.2 Minimum System Requirements	1
1.3 Installing the Scanner	1
1.3.1 Unlock the Scanner	1
1.3.2 Connecting the Scanner to your PC and Printer.....	2
1.3.3 Installing the Scanner Driver	3
Chapter 2: Electrical Safety Precautions.....	4

Important information

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notes

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cords, if any, must be used in order to comply with the emission limits.

Chapter 1: Installation

1.1 Contents of Scanner Package

- Image scanner
- User's manual
- Scanner Drivers disks
- Interface cable

Caution

If you do not find all of the above mentioned items in your scanner package or/and find any obvious physical damage, notify your shipping carrier or contact your dealer immediately.

1.2 Minimum System Requirements

- MS Windows 3.1 or later for PCs
- 2 Megabytes of RAM (8 Megabytes recommended)
- Hard disk with at least 20 Megabytes free space is recommended
- Graphics system capable of displaying at least 256 colors
- Microsoft Windows compatible mouse for PCs

1.3 Installing the Scanner

1.3.1 Unlocking the Scanner

The scanner is locked with a locking mechanism at the top of the scanner, to lock the moveable main element inside the scanner, so that it will not be damaged in transit. To unlock the scanner, open the paper cover and turn the knob from the position indicated "Lock" to the position indicated "Unlock". Please refer to figure 1:

Figure 1 Unlocking the scanner

- A Unlock
- B Lock

Note

Failure to unlock the moveable element may cause damage to the scanner and will void the warranty.

Caution

1. Do not transport the scanner without locking the locking knob.
2. Use original package to pack the scanner for transportation.

1.3.2 Connecting the Scanner

To connect the scanner to your PC

Attach one end of the interface cable to the printer port of your pc and attach the other end of the interface cable to the reciprocal connector on the rear of the scanner, marked Host. Please refer to figure 2:

Figure 2 Connecting the scanner to your pc (printer port)

- A Printer Port
- B From Computer

To connect the scanner to your PC and Printer

After connecting the scanner to your pc, you can connect your printer to the scanner. Please refer to figure 3:

Figure 3 Connecting the scanner to your pc and printer

- A Printer Port
- B From Computer
- C From Printer

1.3.3 Installing the Scanner Driver

The scanner driver can be installed easily by running "a:winsetup" (if the right driver disk is in drive A) from the **File** menu of the Windows **Program Manager**. For future information about the scanner driver, please refer to the **Help** item in the **Preferences** menu.

Chapter 2: Safety Precautions

Read the following instructions thoroughly:

1. Unplug this device before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
2. Do not use this device near water, for example, near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool, etc.
3. Do not place this device on an unstable cart, stand or table. The device may fall causing serious injury to a child or adult and serious damage to the appliance. Use only a cart or stand which is recommended by the manufacturer or which is sold together with the device.
4. This device should be operated only from the type of power source indicated on the marking label on the cabinet. If you are not sure of the type of power supplied at the site of use, consult your dealer or local power company.
5. This device is equipped with a three-wire grounding type plug which has a third (grounding) pin. This plug will only fit in a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace the outlet with one of the appropriate types. Do not underestimate the safety purpose of the grounding-type plug.
6. Do not allow anything to rest on the power cord. Do not put this device in a place where the cord can be abraded or damaged by people walking on it.
7. Never push objects of any kind into this device through cabinet slots as they may be in contact with dangerous voltage points or parts that could result in a fire or electric shock. Never spill liquid of any kind on this device.
8. Do not attempt to service this device yourself. Opening or removing the cabinet may expose you to dangerous voltage or other hazards. This device should only be serviced by qualified service personnel.
9. Unplug the device from the wall outlet, and let it be serviced by qualified personnel under the following circumstances:
 - a) the power cord or plug is damaged or frayed,

- b) liquid has been spilled into the device,
- c) the device has been exposed to rain or water,
- d) the device does not operate normally,
- e) the device has been dropped or the cabinet is damaged,
- f) the device exhibits a distinct change in performance.

Note

Install pluggable equipment near the socket outlet and make sure that it is easily accessible.