

1. Safety First

1. Remove the plugs from the sockets before cleaning the speakers. Do not use liquid cleaning agents or spray cans. Wipe off the speakers with a damp cloth.
2. Do not use the speakers near water.
3. Make sure there is nothing on the power cable. Do not place the speakers in a place where the cable can be subject to wear or can be damaged by persons treading on it.
4. Never insert any object into one of the slots in the housing of the speaker as this object may touch dangerous live components or parts which could result in a fire or an electric shock.
5. Never attempt to repair the speakers yourself. If you open or remove the housing, you may come into contact with high-voltage components or face other hazards. The speakers should only be serviced by specially trained personnel.
6. Remove the plug from the socket under the following conditions, and have the speakers repaired by specially trained personnel:
 - a) the cable or the plug has been damaged or worn;
 - b) liquid has been spilled into the speakers;
 - c) the speakers have been dropped or the housing is damaged.

2. Connection and Operation

1. Connect the Soundwave 80 speakers to your computer's sound card (consult the connection schedule on the package).
2. With most computers the best sound is delivered by using your computer's "LINE-OUT" output. If your computer does not have a "LINE-OUT" output or if the sound is too poor, use the "SPEAK" output.
3. Switch the speakers on. The on/off lamp lights up.
4. Have your computer produce some sound.
5. Adjust the sound using the following controls: Volume control, Bass control (amount of low-frequency sound) and Treble control (amount of high-frequency sound).