

TRUST WIRELESS KEYBOARD

Instruction Manual

Version 1.0

Thank you

Thank you very much for purchasing this product from the Trust range. We wish you hours of fun with it. Please read this manual carefully before using the product.

Registration

Register your purchase now at the Trust Internet site, www.trust.com so that you are able to receive optimal guarantee and service support. You will be automatically informed of developments to your product and of other Trust products. You will also have the chance to win some spectacular prizes.

Copyright statement

No part of this instruction manual may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's own personal use, without prior written permission from the manufacturer.

Disclaimer statement

The manufacturer specifically disclaims all warranties, either express or implied, including, but not limited to, implied warranties for the marketability and suitability for a particular purpose, with respect to the software, the accompanying product manual(s) and written material, and all other accompanying hardware. The manufacturer reserves the right to revise or make improvements to its product at any time and without obligation to notify any person of such revisions or improvements.

In no event shall the manufacturer be liable for any consequential or incidental damages, including any loss of business profits or any other commercial damages, arising out of the use of its products.

All company or product names are trademarks or registered trademarks of their respective owners.

Contents

1. Introduction	2
1.1 Conventions used in this manual	2
1.2 Contents of the package.....	2
1.3 Minimum system requirements	2
2. Safety.....	3
2.1 General information	3
2.2 Batteries	3
3. Connecting.....	3
4. Installing the batteries	4
5. Channel selection.....	4
6. Installation	5
6.1 Trust Software Installer	5
6.2 Installing the software	6
7. Keyboard functions.....	8
7.1 Description of multimedia buttons	8
7.2 Menu options	9
7.3 CD Player.....	10
8. Uninstalling.....	10
9. Troubleshooting.....	11
10. Specifications	11
11. Trust Customer Care Centers	12

A black rectangular box containing the white letters 'GB' in a bold, sans-serif font.

1. Introduction

This manual is intended for users of the Trust Wireless Keyboard. If you have any questions, please consult one of the Trust Customer Care Centers. You can find more information about these Customer Care Centers on the last page of this electronic manual, as well as at the back of the quick installation manual.

1.1 Conventions used in this manual

The following conventions have been used in this manual to indicate instructions:

- <key>** Here you should press a key. The name of the key is given between brackets.
- 'System'** This is a specific term used in a program. These are the terms used by, for example, Microsoft Windows 98.
- [DIR]** Key in the text shown in square brackets [...].
- (term)** The text between the parentheses (...) is the English term, e.g. (File) used in the figure referred to.

Additional information will be shown as follows:

Note: *The Wireless Keyboard only works when connected to your computer's PS/2 port.*

The examples assume that the letter "D" has been assigned to your CD-ROM drive. If your system uses a different drive letter for your CD-ROM drive, for example "E", you should replace "D" by "E".

1.2 Contents of the package

Before reading the manual, please check the contents of the package. It should contain the following:

- Wireless Keyboard
- RF Receiver
- Palm rest
- Batteries (4x type AA)
- Quick installation manual
- CD-ROM containing the drivers, software and instruction manuals

If anything is missing or damaged, please contact one of the Trust Care Centers. You can find more information at the back of this instruction manual.

1.3 Minimum system requirements

- 80486 processor
- PS/2 keyboard connection
- 16MB RAM
- 16MB free hard disk space
- 4x speed CD-ROM drive
- Windows 95
- Sound card (recommended)

2. Safety

2.1 General information

1. Do not use the device in a damp environment, such as a bathroom, a damp basement, a swimming pool, etc.
2. Do not try to repair the device yourself.
3. Under the following circumstances, have the device repaired by qualified personnel:
 - a) The cable or plug is damaged or worn.
 - b) Liquid has entered the device.
 - c) The device has fallen and/or the casing has been damaged.
 - d) The performance of the device is clearly becoming worse.
4. Position the device so that the cables cannot be damaged.
5. If the device must be cleaned, use a damp cloth. Do not use a liquid cleaner or a spray.
6. Make sure that the keyboard is not used in a dusty room. This will shorten the life span of the device.

2.2 Batteries

1. The batteries are not rechargeable. Do not try to recharge them. Recharging may cause an explosion.
2. Never throw the batteries on an open fire. The batteries may explode.
3. Never drill into the batteries.
4. Keep the batteries out of the reach of small children.
5. When the batteries are empty, ask your local authority where you can dispose of them.

3. Connecting

Note: *The Wireless Keyboard only works when connected to your computer's PS/2 port.*

1. Switch off the computer and remove the power plug from the wall socket.
2. Remove the old keyboard from your computer.
3. Attach the palm support to the Wireless Keyboard.
4. Connect the RF receiver plug (figure 1) to your computer's keyboard connection.
5. Insert the computer's power plug back into the wall socket.

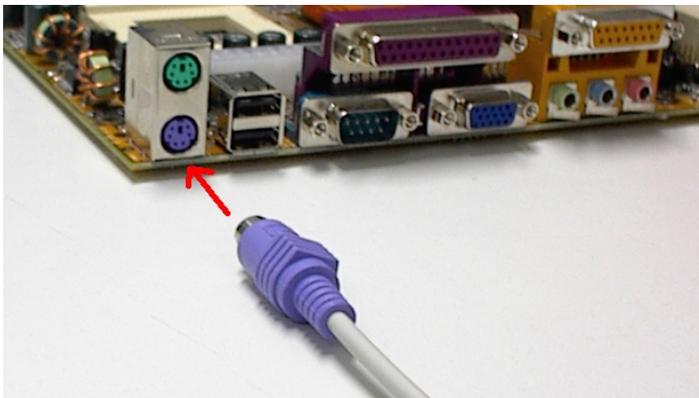


Figure 1: Connecting

4. Installing the batteries

1. Open the two battery flaps on the underside of the keyboard by pushing the flaps in the direction indicated in figure 2 and then pulling the flaps off of the keyboard. Do not use excessive force. The battery compartment is now visible.



Figure 2: Installing the batteries

2. Install the four AA batteries as indicated in the diagram in the battery compartment. Pay attention to the polarity.
3. Replace the two battery flaps onto the keyboard.

5. Channel selection

Before the keyboard can be used, the keyboard's channel must be the same as the RF receiver's channel.

1. Locate the switch to change the channel on the underside of the keyboard (see figure 3). This is in the top left-hand corner.
2. Move this to the right or left (respectively channel 1 or 2). Channel 1 is recommended.
3. Locate the switch to change the channel on the underside of the RF receiver (figure 3).
4. Set this to the same position as you have just set the keyboard to (position 1 or 2).

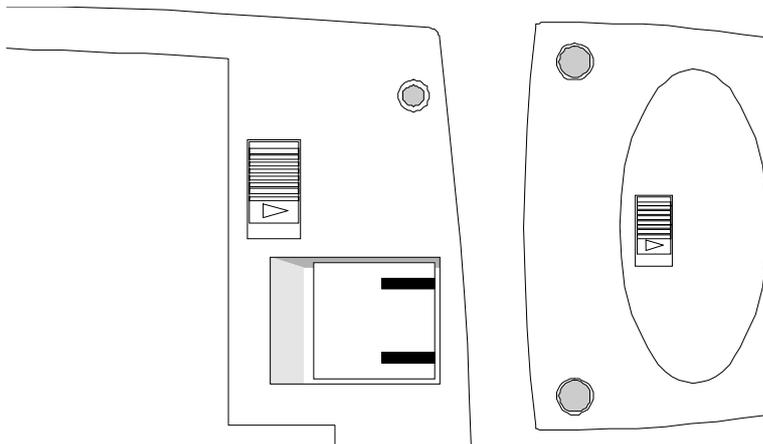


Figure 3: Changing the channels

Note: *The channel must be changed if you experience disturbance from, for example, other Wireless Keyboards during use. Follow the points given above.*

6. Installation

This chapter gives a description how to install the software supplied.

Let op: First remove the software from your previous keyboard, if installed.

6.1 Trust Software Installer

1. Start Windows.
2. Insert the CD-ROM into your CD-ROM drive.
3. Click on 'Start' and select 'Run' (see figure 4).



Figure 4: Starting set-up

4. In the command line, type 'd:\setup' and click on 'OK'. Figure 5 will appear.



Figure 5: Trust Software Installer

5. Select the language you wish the Trust Software Installer to be displayed in. Figure 6 will appear.

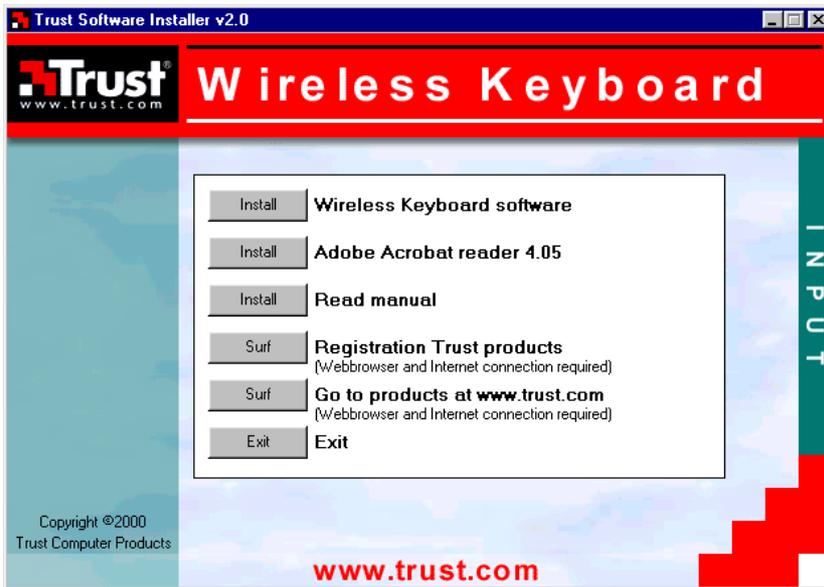


Figure 6: Trust Software Installer

6. Select an option from the menu.

6.2 Installing the software

1. Start the Trust Software Installer (chapter 6.1).
2. Select 'Install Wireless Keyboard software' from the main menu. Figure 7 will appear.



Figure 7: Software installation

3. Click on 'Next'. Figure 8 will appear.



Figure 8: Accepting the program directory

4. Accept the default file location by clicking 'Next'. Figure 9 will appear.

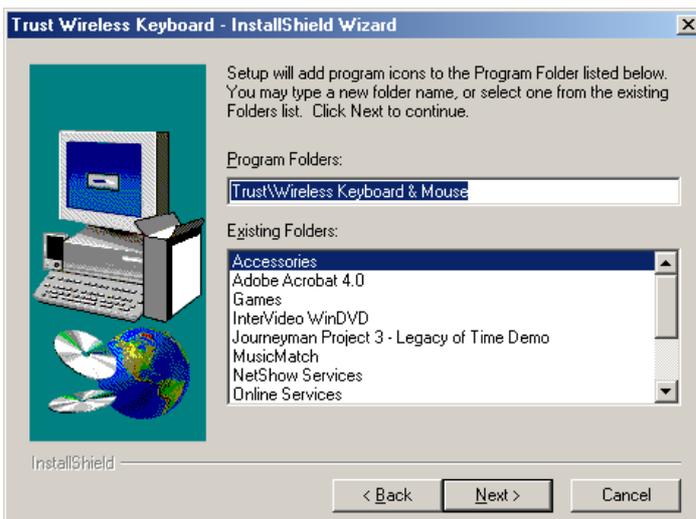


Figure 9: Start menu location

5. Accept the Start menu file location by clicking 'Next'. Figure 10 will appear.

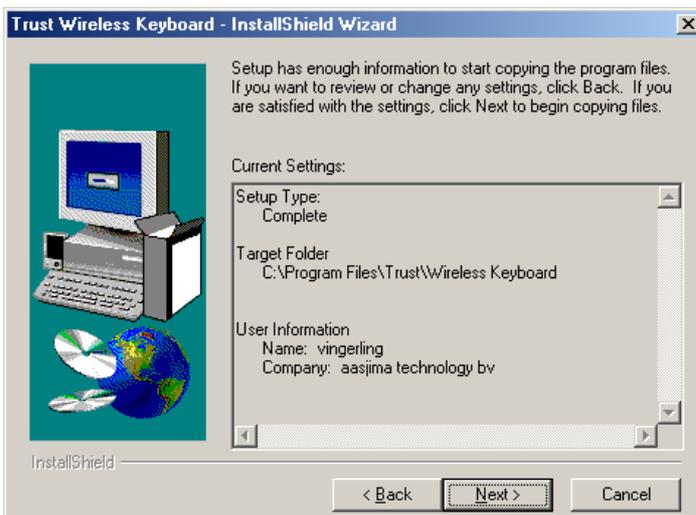


Figure 10: Software installation

- Click on 'Next'. A number of files will be copied. When complete, figure 11 will appear.



Figure 11: Software installation

- Click on 'Finish' to restart your computer.

7. Keyboard functions

7.1 Description of multimedia buttons

Your keyboard has 16 extra multimedia buttons for use in Windows 95, 98, NT4 and 2000 (figure 12). The following functions are installed as standard:



Figure 12: Multimedia buttons

Multimedia buttons	Function
Previous	Returns a music CD to the previous track.
Play/Pause	Plays/Pauses a CD or film.
Stop	Stops a CD or film.
Next	Continues to the next track of a music CD.
Eject	Opens the CD driver tray.
Volume -	Reduces the sound volume.
Volume +	Increases the sound volume.
Mute	Turns the sound on/off.
Screen Saver	Starts the screen saver.
Calculator	Starts the Windows calculator.
E-mail	Starts the e-mail program.
Back	Returns to the previous document in your Internet browser.



Multimedia buttons	Function
WWW	Starts your Internet browser.
Forward	Processes to the next document in your Internet browser.
Sleep	Puts the computer into the 'sleep' setting (Suspend mode).
Wake up	Takes the computer out of the 'sleep' setting.

Table 1: Description of multimedia buttons

Note: If programs such as the Calculator or the e-mail program are not (correctly) installed, you may receive a Windows error message when you try to use these keyboard buttons. Install these programs for optimal use of the keyboard.

7.2 Menu options

All the multimedia buttons are ready for use once the driver has been installed. It will then also be possible to change the menu.

Right click on the icon in the taskbar (figure 13). Figure 14 will appear.

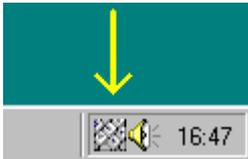


Figure 13: Taskbar icon

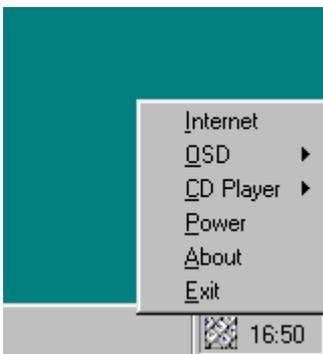


Figure 14: Menu options

The following options are now available.

Menu option	Function description
Internet	Program the 'E-mail' and 'WWW' buttons.
OSD	Change OSD settings, such as letter font, OSD position or turn off the OSD.
CD Player	Configure the CD Player.
Power	Check the battery status
About	Provides information about the product
Exit	Close OSD

Table 2: Description of figure 14

7.3 CD Player

A CD Player for music CD's is also included in the software for the Wireless Keyboard.

The keyboard's CD Player is automatically started when a music CD is inserted into your CD-ROM drive. The Windows CD Player may be started first. If it does, close this and press the 'Play' button on the keyboard. Figure 15 will appear.

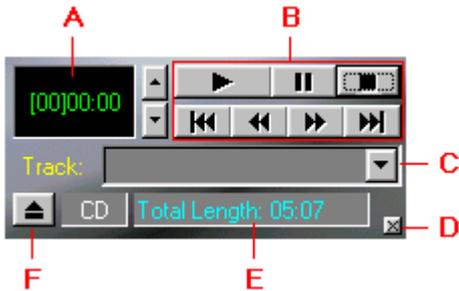


Figure 15: Music CD Player

Button	Description	Function
A	Status screen	Time information about the current music track.
B	Control	CD Player control.
C	CD track name	Look at the play list and select the track that you wish to listen to.
D	Power	Close the CD Player.
E	Total length	Total length of time of the current music track.
F	Eject	Open/close the CD-ROM tray.

Table 2: Description of figure 15

8. Uninstalling

It is only necessary to remove the software if you no longer wish to use the keyboard. Follow the procedure given below:

1. Close the taskbar icon by right clicking on it and selecting 'Exit'.
2. Click on 'Start', 'Settings' and select 'Control Panel'.
3. Double click on 'Add/Remove Software'. A new window will appear.
4. Scroll through this list to 'Trust Wireless Keyboard' and click on it. A blue bar will appear around the text.
5. Click on the 'Add/Remove' button.
6. Restart your computer. The keyboard will be uninstalled after your computer has been restarted.



9. Troubleshooting

Problem	Cause	Possible solution
Multimedia buttons do not react.	The driver has not been (correctly) installed.	Remove the driver and reinstall it (see chapter 4).
The keyboard layout is not correct.	The layout has been configured incorrectly.	Change the keyboard layout using the 'Keyboard' icon in the 'Control Panel'.
When there is more than one CD-ROM drive, the wrong CD tray opens when the 'Eject' button on the keyboard is pressed.	The wrong CD-ROM drive is configured as the default CD-ROM drive.	Change this as follows: Go to the Control Panel and double click on 'Multimedia'. Change the default CD-ROM drive in the 'CD Music' tab (for example, from d: to e:).
The keyboard does not react.	No batteries are installed.	Install the batteries (see chapter 4).
	The batteries are empty.	Replace the batteries.
	The cable has not been connected.	Connect the cable correctly (see chapter 3).
	The distance between the RF receiver and the keyboard is too great.	Place the keyboard nearer to the RF receiver.
	Another device close by is working on the same frequency as the keyboard.	Place the RF receiver nearer to the keyboard.

Table 4: Troubleshooting

Check the FAQ's on the Internet (www.trust.com). You can also register your product via www.trust.com so that you are able to receive optimal guarantee and service support. You will be automatically informed of developments to your product and of other Trust products. You will also have the chance to win some spectacular prizes.

If you still have any problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information on the last page of this electronic manual, as well as at the back of the quick installation manual. Please have the following information available:

- The article number. This is: 11653 / 11674 / 11675 / 11676 / 11677.
- Your hardware information.
- A good description of what precisely does not work.
- A good description of when the problem precisely takes place.

10. Specifications

Normal buttons	104 or 105 (varies per language)
Multimedia buttons	16 function buttons in Windows 95/98/NT4 and 2000: CD Player, Eject, Volume, Mute, Screensaver, Calculator, E-mail, Back, Forward, WWW, Sleep, Wake up
Windows 95 buttons	3
Connection	PS/2

Table 5: Technical specifications

11. Trust Customer Care Centers

Inhabitants of Great Britain and Ireland should contact:	
	GB Office
From: 9:30 - 17:00	Internet www.trust.com E-mail support-uk@trust.com Fax +44-(0)1376-514633 Tel. +44-(0)1376-500000
Inhabitants of Italy should contact:	
	Italian Office
From: 9:00 - 13:00 / 14:00 - 18:00	Internet www.trust.com E-mail support-it@trust.com Fax 051-6635843 Tel. 051-6635947
Inhabitants of France and North Africa should contact:	
	French Office
From: 9:00 - 17:00	Internet www.trust.com E-mail support-fr@trust.com Fax +33-(0)1-48174918 Tel. +33-(0)1-48174931
Inhabitants of Germany should contact:	
	German Office
From: 9:00 - 17:00	Internet www.trust.com E-mail support-de@trust.com Fax 02821-58873 Tel. 0800-00TRUST (=0800-0087878)
Inhabitants of Spain should contact:	
	Spanish Office
From: 9:00 - 17:00	Internet www.trust.com E-mail support-es@trust.com Fax +31-78-6543299 Tel. +31-78-6549999
Inhabitants of the Netherlands should contact:	
	Dutch Office
From: 9:00 - 17:00	Internet www.trust.com E-mail support-nl@trust.com Fax 078-6543299 Tel. 0800-BELTRUST (=0800-23587878) or 078-6549999
Inhabitants of all other European countries should contact:	
	European Head Office
From: 9.00 - 17.00	Internet www.trust.com E-mail support@trust.com Fax +31-78-6543299 Tel. +31-78-6549999