

User's Manual

Please contact your dealer if the product is damaged or anything is missing.

Warning: *This apparatus is not suitable for children younger than 3 years old.*

Connecting and using the game pad

Connection

Follow the instructions given below to connect and use the game pad:

It is recommended to connect the game pad to the first game port on your PlayStation. Push the plug firmly into the connection.

Note: *Do not play with the game pad when turning on your PlayStation. The game pad will be automatically calibrated when your PlayStation is turned on.*

The Sight Fighter PSX is now ready for use.

Use of the game pad

Use of the game pad depends on the type of game being played. Consult the instruction manual which is supplied with the game for more information.

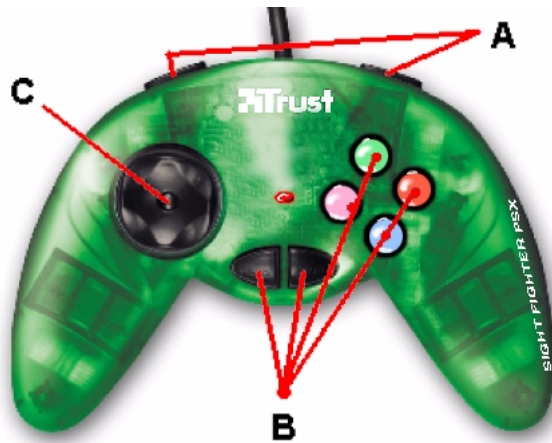


Figure 1: Using the game pad

Button	Function
A	Fire buttons
B	PlayStation function buttons
C	D pad for movement in different directions

Table 1: Description of figure 1

Troubleshooting

Problem	Cause	Possible solution
The game pad does not work or does not work properly.	The game pad's connection plug is not pushed in firmly enough.	Push the game pad's connection plug firmly into the socket. See the 'connection' chapter.

Check the FAQ's on Internet at (www.trust.com). You can register your product at www.trust.com. This will allow us to keep you informed of new products and any additions to your product.

If you still have any problems after trying these solutions, please contact your dealer or call the Trust Helpdesk. Please have the following information available:

- The article number. This is 11655.
- The game used.
- A good description of what does not work and when it happens.