

## 1 Introduction

This instruction manual is for users of the 'TRUST WIRELESS KEYBOARD + MOUSE 300KD'. The keyboard and mouse connects true radio frequency to your computer. The keyboard and mouse uses two channels. The keyboard and mouse uses 255 ID codes so multiple sets can be used in one room.



## 2 Safety

1. Do not use the device in a damp environment, such as bathrooms, damp basements, swimming pools, etc.
2. Do not repair the device yourself.
3. Under the following circumstances have the device repaired by qualified personnel:
  - a) The cable or plug is damaged or worn;
  - b) Liquid has entered the device;
  - c) The device has fallen and/or the casing has been damaged;
  - d) The device is definitely functioning worse.
4. Position the device so that the cables cannot be damaged.
5. This device has been approved according to the European R&TTE guidelines. The device works using a 2.4GHz sender/receiver. If in doubt, check whether the use of this device is permitted in your country.

**CE0678(!)**

## 3 Inserting the batteries

1. Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.
2. Install the AA alkaline batteries in the Wireless keyboard.
3. Remove the battery compartment cover on the bottom of the mouse by pressing down on the tab. Insert the batteries as shown in side the battery compartment.
4. Install the AAA alkaline batteries into the mouse mouse

**Note:** *Inserting the batteries incorrectly will cause damage.*

**Note:** *Only replace the batteries with the same type of alkaline or rechargeable NIMH batteries (2 x AA and 2 x AAA).*

## 4 Installing

### 4.1 Keyboard & mouse

**Note:** *The mouse does not work when a converter is used.*

1. Remove the existing keyboard and mouse software.
2. Make sure that your computer is turned off.
3. Remove the existing keyboard and mouse.
4. Connect the receiver's purple keyboard cable to the computer's keyboard PS/2 port.
5. Connect the receiver's green mouse cable to the computer's mouse PS/2 port.
6. Place the receiver eight inches (20 centimeters) from any electromechanical device.
7. Set the frequency channel on the receiver to 1 or 2. Both keyboard and mouse may have different channels.
8. Set the frequency channel on the keyboard and mouse exactly the same as you have selected on the receiver. The channel switch can be found at the bottom of the keyboard and in the battery compartment from the mouse.
9. Switch on the computer.
10. Establish communication between the receiver and keyboard by pressing any key from the keyboard.
11. Establish communication between the receiver and mouse by simply moving the mouse.

The mouse and keyboard will now work as a standard keyboard and mouse. Before you can take advantage of the many features your mouse and keyboard offers, you must install the software.

### 4.2 Software installation

1. Place the CD-ROM in your CD-ROM drive. The Installer will start up automatically.  
If it doesn't, do the following:
  - a) Select 'Execute' in the Start menu.
  - b) Type [D:\SETUP.EXE] and click 'OK' in order to start up the Trust Software Installer.
2. You will see a screen as in Figure 1.
3. Click the language you wish to use during the installation.
4. Click ' WIRELESS KEYBOARD + MOUSE 300KD ' in order to start up the installation.
5. Follow the steps onscreen.
6. When the software installation is finished your computer reboots and the Wireless Mouse window appears. See figure 2.
7. Now go to chapter 5.1 to proceed installing and setting ID code.

**Note:** *As a example we have specified "D:\\" to be the cd-rom drive, this could be different from each computer.*

## 5 ID codes

Each keyboard and mouse is assigned to a unique ID code at manufacture, so the receiver only picks up the signal from your keyboard and mouse and prevents other Wireless keyboard or mouse radio signals from operating on your computer. There are 255 unique codes, when you follow the procedures in the next chapters you can connect these unique ID codes for both the mouse and keyboard. The ID codes will

be selected by the receiver for the keyboard and by the software for the mouse. The ID code is not displayed but when you will have another Trust Wireless Keyboard + Mouse 300KD you will see that there is no interference. This feature can also be disabled, allowing other Wireless pointing devices to operate your computer. This feature does not function as a security feature.



### 5.1 Connecting the Wireless Mouse ID Code

You can choose between to options:

1. Connect ID: The unique ID code of your mouse is recognised and another RF pointing device will not function on your computer. Move the Wireless Mouse for a few seconds to establish a connection, then click "Connect ID".
2. Not connect the ID: If no other RF pointing devices are within 3 meters range or if you want other RF pointing devices to be able to access your computer. Click "Exit".

### 5.2 Changing the Wireless Mouse ID Code

You can use a new Wireless Mouse on your computer without changing the Radio receiver; you just need to change the ID code. Refer to the following:

1. Press [Shift + Alt + F11] or [Shift + Alt + F12] to call up the Wireless Mouse ID Code window.
2. Move the Wireless Mouse for a few seconds to establish a connection, then click Connect ID.
3. The new ID code is connected and the Wireless Mouse window closes.
4. To exit with out changing the ID code click "Exit".


### 5.3 Connecting the Wireless Keyboard ID Code

Manually establish communication between the receiver and keyboard.

1. Press any key from the keyboard
2. Press the "ID Connect" button on the receiver, the green LED light above the ID connect button will show you that the keyboard ID is connected. If the green LED light is off then keyboard ID is disconnect.

## 6 Software

### 6.1 Keyboard software

1. Double-click on the keyboard icon in the system tray 
2. The screen with the 'Hot Keys' menu will appear. See figure 3.
3. In the 'Hot Keys' menu you can:
  - Set hotkeys; select the button you want and assign a function to it. When you select "iKeyWorksOffice" the hotkeys are configured for MS Office commands. Then use the overlay called "office mode". When you select " Hot Keys to Default Mode " the hotkeys will be configured for multimedia purposes. Then you do not have to use a overlay. A function can also be set manually, in this case you can use the overlay called "personal". Select the button that you want to change. Then select 'custom' then press 'select'. Then select the "command type":
    - Shell Execution**, when you want to run a \*.exe file with the specific button.
    - Key strokes**, when you want to have one keystroke for a combination of others keys.
    - Office shortcut**, when you want to select a standard office application.
    - Generic comand**, when you want to select a standard windows command.

4. In the 'options' menu (figure 4) you can:
  - Set ctrl + volume as zoom in/out in Microsoft Office.
  - Set "Caps Lock"; "Num Lock"; "Scroll Lock" into the system tray when activated.
  - Hide the keyboard icon in the system tray.
5. In the 'Onscreen display' menu (figure 5) you can:
  - Change the way the on screen display is displayed on your monitor.

## 6.2 Mouse software





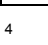 
1. Double-click on the Trust icon in the system tray.
2. The screen with the 'buttons' menu will appear. See figure 6.
3. In the 'buttons' menu you can:
  - Assign buttons; select the button you want and assign a function to it by means of the pull down menu.
  - Set the double-click speed; move the slider to slow or fast.
  - Set for right or left-hand operation; select left or right handed.
  - After programming the selected settings, click on 'apply'.
4. In the 'wheel' menu (figure 7) you can:
  - Set the wheel mode; select 'Enhanced Dual Wheel-Mode', which uses all functions of the MS IntelliMouse plus vertical and horizontal scrolling in Windows 95, 98, 2000 and NT-programs or select 'MS-IntelliMouse-comp. Mode', which only uses the vertical scroll wheel and has the same functions as the MS IntelliMouse. If you select 'vertical and horizontal wheel', the function of these two is reversed.
  - Setting the horizontal and vertical scroll speed; select the number of lines per scroll or one page per scroll.
  - Switch on the zoom function in office 97/2000.
5. In the 'Settings' menu (figure 8) you can change the 'netjump' and 'luckyjump' menus to your liking.
6. To create new functions, click on 'New/Update'. Follow the instructions on your screen.

**Note:** The 'Netjump' and 'Luckyjump' menu can be assigned to one of the mouse buttons via the 'buttons' menu.

## 7 Use keyboard

### 7.1 Discription multimedia buttons

In table 1 below the functions for the standard "KeyWorksOffice" and "Default functions" are specified.

Hot Keys	Default Functions	Microsoft Office program functions
	<b>My Home key:</b> Accesses your home web page for favorite internet address	<b>Word:</b> Access Microsoft word application
	<b>E-mail key:</b> Launches an e-mail application	<b>E-mail key:</b> Launches an e-mail application
	<b>Favorite key:</b> Starts an application, accesses a web site and web sites	<b>+ Font Size:</b> Increase font size.
	<b>Search key:</b> Displays a menu of internet search engines	<b>- Font Size:</b> Decrease font size.
	<b>Previous Track Key:</b> Plays the previous track.	<b>Next Doc.:</b> Open next document








Hot Keys	Default Functions	Microsoft Office program functions
	<b>Next Track key:</b> Plays the next track.	<b>Previous Doc.:</b> Open Previous Document
	<b>Play/Pause key:</b> Plays or pauses the CD/DVD.	<b>Excel:</b> Access Microsoft Excel application
	<b>Stop key:</b> Stops play.	<b>Open document:</b> Access my documents
	<b>Volume Up key:</b> Increase sound volume.	<b>Zoom In:</b> To magnify the view of a document.
	<b>Volume Down key:</b> Decreases sound volume.	<b>Zoom Out:</b> To demagnify the view of a document.
	<b>Mute key:</b> Dramatically reduces the sound volume.	<b>My Document:</b> Access the My Document function
	<b>Suspend key:</b> Access the Windows Shut Down dialog box, where you can put your system on stand-by or shut down windows.	<b>Office Tools:</b> Show the Office tools



Table 1: button functions

### 7.2 Penholder

At the top of the keyboard at the right side there is a hole in the keyboard. This hole can be used as a penholder.

### 7.3 Overlays

Included with the keyboard there are two overlays. These overlays can be used to specify the buttons depending on which mode is selected "iKeyWorksOffice" or "default mode". Refer to chapter 6.1 to see which layout can be used for the specific mode.

## 8 Troubleshooting

Problem	Cause	Possible solution
<b>Multimedia buttons do not react.</b>	The software has not been (correctly) installed.	Remove the driver and reinstall it.
<b>The keyboard layout is incorrect.</b>	The layout has been configured incorrectly.	Change the keyboard layout using the 'Keyboard' icon in the 'Control Panel'.
<b>The keyboard does not react.</b>	No batteries have been installed.	Install the batteries.
	The batteries are empty.	Replace the batteries.
	The cable has not been connected.	Connect the cable correctly.
	The distance between the Wireless Receiver and the keyboard is too great.	Place the keyboard nearer to the Wireless Receiver.
	Another device close by is using the same frequency as the keyboard.	Place the Wireless Receiver nearer to the keyboard.

TRUST WIRELESS KEYBOARD + MOUSE 300KD

<b>Problem</b>	<b>Cause</b>	<b>Possible solution</b>
<b>The mouse does not move.</b>	The mouse has not been connected or has not been connected correctly.	Connect the Wireless Receiver correctly to the PS/2 port and restart the computer.
	No batteries have been installed.	Install the batteries.
<b>The mouse does not move.</b>	The distance between the Wireless Receiver and the mouse is too great.	Move the mouse nearer to the Wireless Receiver.
	Another device close by is using the same frequency as the mouse.	Change the channel. Move the mouse nearer to the Wireless Receiver.
<b>Windows gives an error message when starting.</b>	The mouse has not been connected or has been connected incorrectly.	Connect the mouse correctly and restart your computer.
<b>The scroll function does not work.</b>	The software for your previous mouse is still active.	Remove the software for your previous mouse before installing this software. Read the instruction manual for your previous mouse for instructions on how to do this.
	The software has not been installed.	Install the mouse software.
	The mouse is in the wrong mode.	Set the mouse to the correct mode.
	The software is incorrectly set.	Set the software correctly.
<b>The problem is not in this table.</b>	The application is not 100% compatible with Windows.	Use an application that is compatible.
	Download latest FAQ update.	Go to: <a href="http://www.trust.com/12515">www.trust.com/12515</a> for FAQ and other product information. The item number is different for each country.

---

TRUST WIRELESS KEYBOARD + MOUSE 300KD

Check the FAQ's on the Internet ([www.trust.com](http://www.trust.com)). You can also register your product at [www.trust.com](http://www.trust.com), so that you can receive optimal guarantee and service support. You will be automatically informed of developments to your product and other Trust products. You will also have the chance of winning some spectacular prizes.

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information at the back of this instruction manual. Please have the following information available:

- The article number. This is 12515 (US); 12516 (FR); 12517 (IT); 12518 (GM); 12519 (UK); 12520 (ES).
- Your hardware information;
- A good description of what does not work;
- A good description of when the problem occurs.

**UK**