

## Product information



- |   |  |
|---|--|
| <b>A:</b> Previous page in Internet Explorer                  | <b>F:</b> Status LED                       |
| <b>B:</b> Left mouse button/battery charge indicator          | <b>G:</b> Button for a wireless connection |
| <b>C:</b> Scroll wheel + third mouse button/battery indicator | <b>H:</b> Button for a wireless connection |
| <b>D:</b> Right mouse button                                  | <b>I:</b> Movement (ball) sensor           |
| <b>E:</b> Next page in Internet Explorer                      | <b>J:</b> Battery compartment              |

## Installation

- 1 Insert the batteries into the battery compartment (J) as indicated.
- 2 Turn the computer off.
- 3 Connect the green PS/2 plug to the green PS/2 port on the computer.
- 4 Turn on the PC.

## Activating the wireless connection

- 5 Use a pointed object to press the connection button (G). The indicator (F) will start to flash.  
Use a pointed object to press the connection button (H). The indicator (F) will start to flash faster. The mouse is now ready for use. When the mouse moves → the indicator (F) will flash. When the mouse is still → the indicator (F) is lit continuously.

## Note



### Wireless performance

- Maximum distance in free space is 2 metres.
- Reduced wireless performance can be caused by:
  - Metal objects near or between the receiver and the mouse.
  - Empty batteries.
  - Other wireless devices close by.
- Solution:
  - Replace the batteries.
  - Remove other wireless devices.
  - Reduce the distance.

### Batteries/charging

- The battery indicator (C) on the mouse will be lit when the batteries are almost empty. Replace the batteries.
- Keep the batteries out of the reach of small children.
- For the best performance, use rechargeable AAA NiMH batteries.
- Do not recharge the batteries provided and do not throw them onto a fire.
- Observe the local regulations when disposing of the batteries.

### Troubleshooting

- If the mouse arrow on the monitor cannot be operated, activate the wireless connection (see steps 5 and 6).
- If the mouse cursor does not move smoothly, use a mouse mat or reduce the distance between the mouse and the receiver.

Go to [www.trust.com/12522](http://www.trust.com/12522) for up-to-date FAQs, drivers and instruction manuals.

### Safety instructions

- Never open or repair this device yourself.
- Do not use the device in a damp environment. Clean the device with a damp cloth.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/12522/ce](http://www.trust.com/12522/ce).

### Wireless

- This wireless device works at a frequency of 27 MHz. It meets all the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in the following countries: all EU countries. There are no limitations for the above-mentioned countries. Go to [www.trust.com/12522](http://www.trust.com/12522) for an updated list of the countries where the use of this device is permitted.
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets the local regulations. Frequency: 27.045 ~ 27.095 MHz; Bandwidth: approx. 4.5 kHz; Power: 0.01 mW.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

**Warranty & copyright**

- This device has a two-year product warranty which is valid from the date of purchase. Go to [www.trust.com/warranty](http://www.trust.com/warranty) for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.

UK