

1 Introduction

This manual is intended for users of the AMI MOUSE 300 CORDLESS DUAL SCROLL. Prior knowledge for installing and using this product is not necessary. This mouse has a vertical as well as a horizontal scroll wheel. The mouse works without wires via infrared and thus gives you more freedom.

UK

2 Safety

1. Do not use the device in damp environments, such as bathrooms, damp basements, swimming pools, etc.
2. Do not repair the device yourself.
3. Under the following circumstances have the device repaired by qualified personnel:
 - a) The cable or plug is damaged or worn;
 - b) Liquid has entered the device;
 - c) The device has fallen and/or the casing has been damaged;
4. Position the device so that the cables cannot be damaged.

3 Installation

Before installing the software for the AMI MOUSE 300 CORDLESS DUAL SCROLL, you must first delete the setup programs for your previous mouse. Consult the manual of your previous mouse for this.

3.1 Inserting batteries

1. Take the mouse from the package.
2. Turn the mouse upside down. The battery compartment cover becomes visible (see figure 1).
3. Open the battery compartment cover.
4. Insert the enclosed batteries.
5. Put the battery compartment cover back on until you hear a soft click.

Note: *Insert the batteries with the poles in the right direction, as shown in the battery compartment.*

3.2 Connecting

Note: *Connect the mouse only to the PS/2 port of your computer.*

1. Make sure the computer is off and any old mouse drivers have been deleted from your system.
2. Connect the mouse to the PS/2 port of your computer.
3. Switch the computer on.
 - The mouse is automatically detected and installed in all operating systems.

In order to obtain the best results with receiving signals from the mouse, attaching the receiver to the bottom or the side of your monitor using the enclosed Velcro tape is recommended. Your mouse has two transmitters for an optimum operation range of 160°. The green LED in the receiver indicates that data are transferred correctly

Let op: *The mouse will not function if the infrared beam from mouse to receiver is interrupted.*

3.3 Installation software

1. Insert the CD-ROM in your CD-ROM player. The installer will start automatically.
If this is not the case, follow the steps below:
 - a) Select 'Run' in the start-up menu.
 - b) Type [D:\SETUP.EXE] and click on 'OK' to start up the Trust Software Installer.
2. Figure 2 will appear.
3. Select the language you want to use for installation.
4. Click on 'AMI MOUSE 300 CORDLESS DUAL SCROLL' to start the installation.
5. Follow the steps that appear on your screen.
6. When figure 3 appears, click on 'finish'. The mouse has been installed and is ready for use.

4 Use

4.1 Mouse

The functions of the buttons are explained in table 1 in combination with figure 4.

Button	Function	Observation
A	Scroll wheel	Horizontal slide
B	Right mouse button	
C	Scroll wheel + third mouse button	Vertical slide. Press the wheel down to use the third mouse button.
D	Infrared window	
E	Left mouse button	

Table 1: Information on the buttons

4.2 Maintenance

The mouse ball will pick up dirt in use and may start to function more poorly due to this.

1. Switch the computer off
2. Remove the that which holds the ball in place
3. Take the ball from its compartment/
4. Clean the compartment of the ball. Use a slightly moist cotton swab (not too moist). The mouse may stop functioning if it is too moist
5. Clean the ball by holding it under the cold water faucet for a short time and dry it with a lint-proof cloth.
6. Put the ball back into the mouse, put the ring back in place and switch the computer on.

A black square containing the white letters 'UK' in a bold, sans-serif font.

4.3 Software

1. Double-click on the Trust icon in the system tray. See figure 5.
2. The screen with the 'buttons' menu will appear. See figure 6.
3. In the 'buttons' menu you can:
 - Assign buttons; select the button you want and assign a function to it by means of pulldown menu.
 - Set the double-click speed; move the slider to slow or fast.
 - Set for right or left-hand operation; select left or right handed.
 - After programming the selected settings, click on 'apply'.
4. In the 'wheel' menu (figure 7) you can:
 - Set the wheel mode; select 'Enhanced Dual Wheel-Mode' which uses all functions of the MS IntelliMouse plus vertical and horizontal scrolling in Windows 95, 98, 2000 and NT-programs or select 'MS-IntelliMouse-comp. Mode', which only uses the vertical scroll wheel and has the same functions as the MS IntelliMouse. If you select 'vertical and horizontal wheel', the function of these two is reversed.
 - Setting the horizontal and vertical scroll speed; Select the number of lines per scroll or one page per scroll.
 - Switch on the zoom function in office 97/2000.
5. In the 'Settings' menu (figure 8) you can change the 'netjump' and 'luckyjump' menus to your liking.
6. To create new functions, click on 'New/Update'. Follow the instructions on your screen.

Note: The 'netjump' and 'Luckyjump' menu can be assigned to one of the mouse buttons via the 'buttons' menu.

5 Troubleshooting

Problem	Cause	Possible solution
The mouse arrow does not move.	Receiver not connected correctly.	Connect the receiver again.
	Outside of the senders range.	Use the mouse closer to the sender.
	Receiver does not 'see' the mouse.	The front of the mouse must be directed towards the front of the receiver.
	Batteries are empty.	Replace the batteries.
	Batteries inserted incorrectly.	Insert the batteries with the poles in the right direction.
Windows does not detect a mouse.	Receiver not connected.	Connect the receiver correctly.
Scroll function does not work.	Software of your previous mouse has not been deactivated.	First delete the software of your previous mouse before installing this software. Consult the software for your previous mouse.
	Software not installed.	Install the mouse software.
	Mouse set in the wrong mode.	Set the mouse to the correct mode.
	Mouse not installed in Windows 2000 or NT	Delete the software and reinstall the mouse
	Software set incorrectly.	Set the software correctly.
Application not 100% compatible with Windows.	Use an application which is compatible.	
The mouse responds poorly.	Ball and rollers are dirty.	Clean ball and mouse.

Register your product via www.trust.com so that you are able to receive optimal guarantee and service support such as up-to-date FAQ and the latest drivers. You will also be automatically informed of developments to your product and of other Trust products. And have the chance to win some spectacular prizes.

If you still have any problems after trying these solutions, please contact one of the Trust Customer Care Centres. You can find more information on the last page of this manual. Please have the following information available:

- The article number. This is: 12535;
- A good description of what precisely does not work;
- A good description of when precisely the problem takes place.