

## 1 Introduction

This instruction manual is intended for users of the 'TRUST DIRECT ACCESS II KEYBOARD'. The TRUST DIRECT ACCESS II KEYBOARD has 13 special function keys.

A black square containing the white letters 'UK' in a bold, sans-serif font.

## 2 Safety

Carefully read the following instructions before use:

1. The TRUST DIRECT ACCESS II KEYBOARD does not require any special maintenance. Use a slightly damp, clean cloth to clean the keyboard. Do not use aggressive substances, such as petrol or white spirit, to clean the device. These may harm the material.
2. Do not submerge the device in liquid. This may be dangerous and will damage the device. Do not use this device near water.
3. Make sure nothing is placed on the power cable. Do not use this device in an area where the cable can become worn or damaged as a result of people walking over it.
4. Do not repair this device yourself. If you open this device, you may touch live components. This device must only be repaired by qualified personnel.
5. Under the following circumstances, have the device repaired by qualified personnel:
  - a) The cable or plug is damaged or worn.
  - b) The device has come into contact with rain, water or another liquid.

## 3 Installation

### 3.1 Connecting

Follow the instructions given below to connect the keyboard.

1. Remove the software for your old keyboard from your computer. If necessary, see the instruction manual provided with your old keyboard for instructions on how to do this.
  2. Turn the computer off.
  3. Disconnect the old keyboard.
  4. Connect the Direct Access II Keyboard to your computer's PS/2 port.
  5. Turn the computer on.
- The keyboard will now work as a standard keyboard. You will have to install the software provided if you wish to use the multimedia keys.

### 3.2 Installing the software

1. Insert the CD-ROM into your CD-ROM drive. The installation program will start automatically. If it does not start automatically, carry out the following:
  - a) Select 'Run' from the Start menu.
  - b) Type [D:\SETUP.EXE] and click on 'OK' to start the installation program.
2. Figure 1 will appear.
3. Click on the language you wish to use for the installation.
4. Click on 'Touch Manager' to start the installation.
5. Follow the on-screen instructions.
6. Your computer will be restarted after the installation has been completed.

**Note:** In the example, 'D:\' was used to indicate the CD-ROM drive. This may be different for your computer.

## 4 Use

### 4.1 Multimedia keys

Table 1 gives an explanation of the functions of the multimedia keys on the keyboard. Use table 1 in combination with figure 2.

Key	Name	Description
A	Power	Turns the computer off.
B	Sleep	Places the computer in the Stand-by mode.
C	E-mail	Hot key for your e-mail program.
D	Search	To search for files or folders.
E	Favorites	Hot key for your favorites in your Internet browser.
F	Internet	Hot key for your Internet browser.
G	Play/pause	Plays and pauses audio CD's in Windows Media Player.
H	Stop	Stops playing audio CD's.
I	Mute	Turns the sound off.
J	Previous	Skips to the previous track of an audio CD in Windows Media Player.
K	Next	Skips to the next track of an audio CD in Windows Media Player.
L	Volume down	Lowers the volume.
M	Volume up	Increases the volume.

Table 1: Multimedia keys

### 4.2 Special function keys

The compact design of this keyboard means that the PrtSc, SysRq, ScrLk, Pause and Break keys must be used in combination with the "Fn" key. This key is located in the bottom left-hand corner next to the Control key (CTRL).

### 4.3 Software

If the software has been installed, it is possible to assign the multimedia keys to a:

- Fixed function
- Program or Internet page



#### 4.3.1 Assigning a fixed function

1. Double-click on the 'Touch Manager' icon in the taskbar (see figure 3).
2. Figure 2 will appear.
3. Click on the key that you wish to program.
4. Figure 4 will appear.
5. By default, this window is set to 'Select Pre-defined Functions'.
6. Select the function you wish to assign to the key from the list.
7. Click on 'OK'.

The key has now been assigned a fixed function.

#### 4.3.2 Assigning a program or Internet page

1. Double-click on the 'Touch Manager' icon in the taskbar (see figure 3).
2. Figure 2 will appear.
3. Click on the key that you wish to program.
4. Figure 4 will appear.
5. By default, this window is set to 'Select Pre-defined Functions'.
6. Select 'Specify a program or Web page' (see figure 5).
7. Select the 'Browse' button.
8. A list will be displayed which you will be able to scroll through. Select the program or Internet page (for example, from your 'Favorites' folder) that you wish to assign to the key.
9. Click on 'Open'. Figure 5 will now appear.
10. If desired, enter a name in the 'Key title' text box.
11. Click on 'OK'.

You have now successfully assigned a program or Internet page to the key.

**Note:** The 'Power' and 'Sleep' keys cannot be programmed.

## 5 Troubleshooting

Problem	Cause	Possible solution
<b>The Multimedia keys do not work.</b>	The software has not been installed.	Install the Touch Manager software.
	Components of the software for an old keyboard are still installed.	See the instruction manual of the keyboard concerned for instructions on how to remove the old software.
<b>The keyboard layout is incorrect.</b>	The layout has been set incorrectly.	Change the keyboard layout by double clicking on the 'Keyboard' icon or the 'Regional Settings' icon in the 'Control Panel'.
<b>The multimedia keys do not work with your player.</b>	The keys only work in Windows Media Player.	Use Windows Media Player.
<b>The problem is not listed here.</b>	The latest driver updates, instruction manuals and FAQ's can be found on our Internet site at <a href="http://www.trust.com/12743">www.trust.com/12743</a> .	All this information is available after registering your e-mail address and product.

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information at the back of this instruction manual. Please have the following information available:

- The article number. This is 12743, 12744 (FR), 12745 (IT), 12746 (GM), 12747 (UK) or 12748 (SP).
- A good description of what does not work.
- A good description of when the problem occurs.