

<u>Instructions when using for the first time</u>	Chapter
1. Connecting	(4)
2. Placing a battery in the remote control	(5)
3. Use	(6)



1 Introduction

This instruction manual is for users of the 'TRUST PHOTO VIEWER'. The TRUST PHOTO VIEWER is used for viewing photos that you have made with your digital camera on your full-size TV screen. The Photo Viewer supports SmartMedia Card and CompactFlash type I and II memory cards, containing photos stored in JPEG (exif) format with a resolution of up to 2400x1800 (4.3 Mpixel).

Using the remote control unit supplied, you can easily zoom in on the photos, turn them through 90 degrees, start up a slide show, display up to 16 photos simultaneously on your TV and browse through them, and also use the OSD menu.

The Trust Photo Viewer has a compact shape, so that you can also simply take it along with you and look at your holiday snaps when visiting family and friends.

2 Safety

Carefully read the following instructions before use.

- The TRUST PHOTO VIEWER does not require any special maintenance. Use a slightly damp, clean cloth to clean the casing.
- Do not use aggressive substances, such as white spirit, to clean the device. These may harm the material.
- Do not submerge the device in liquid. This may be dangerous and will damage the device. Do not use this device near water.
- Make sure nothing is placed on the cable. Do not use this device in an area where the cable can become worn or damaged as a result of people walking over it.
- Do not repair this device yourself. If you open this device, you may touch live components.
- Under the following circumstances, have the device repaired by qualified personnel:
 - The cable or plug is damaged or worn.
 - The device has come into contact with rain, water or another liquid.

3 Approval



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/13487/ce.

4 Connecting

Follow the instructions below to connect the Trust Photo Viewer up to your TV. Figure 1 also shows you how to do this.

1. Connect the plug (B) of the 7.5V DC / 600mA power supply adapter (A, supplied) to the DC-IN socket (C) at the back of the Photo Viewer.
2. Connect the plug (G) of the composite video cable (supplied) to the yellow VIDEO connector (E) at the back of the Photo Viewer.
3. Connect the other plug (H) of the composite video cable (supplied) to the composite video input of your TV (yellow cinch plug).

Note: *You cannot connect the composite video cable to the antenna input of your TV.*

4. If your TV does not have a composite video input (yellow cinch plug), then you should connect the plug (H) of the video cable to the connector (I) of the SCART converter plug (J) supplied. Connect the SCART plug (J) to your TV.
5. Optionally, you can also connect the Photo Viewer to your TV via the S-VIDEO connection (D), if the TV has an S-VIDEO input. S-VIDEO gives better quality than composite video.

Note: *An S-VIDEO cable is not delivered with the Photo Viewer. You can obtain one of these from your local TV shop.*

6. Set the PAL/NTSC switch (F) on the back of the Photo Viewer to PAL (the European TV standard). NTSC is for America and Japan.

Note: *Consult your TV's manual to find the correct TV standard setting; nowadays most TVs support both PAL and NTSC.*

7. Connect the power supply adapter (A) to the mains.

5 Inserting a battery in the remote control

Follow the instructions below to put a new battery in the remote control or replace the old one. Figure 2 also shows you how to do this.

Note: *When you take the remote control out of its packaging for the first time, there is a protective plastic tab (D) that has been inserted in the battery holder. You will need to remove this before you can use the remote control.*

1. Turn the remote control (A) upside down.
2. Push the battery holder clip (C) to the right and then lift the battery holder out.
3. Insert / replace the 3V DC CR2025 type battery (B) and ensure that the + side of the battery is facing upwards.
4. Push the battery holder back into the remote control.



6 Use

6.1 Base station

Follow the instructions below to operate the various functions of the base station. Figures 3 and 4 also show you how to do this.

1. Switch your TV on and select the video input that the Photo Viewer has been connected to (composite video, S-VIDEO or SCART input).

Note: Consult your TV's manual for selection of the correct video channel.

2. To switch the Photo Viewer on, press the 'POWER' button (C, figure 3) on the top of the base station. The red LED (E, figure 4) will light up and the startup screen with the Trust logo will appear on the TV, followed by the message 'NO CARD'.
3. Place a CompactFlash type I or II (C, figure 4) in the upper slot (A, figure 4) and/or a SmartMedia Card (G, figure 4) in the lower slot (F, figure 4) and push the card in until it will not go any further. For a CompactFlash card the name sticker must be facing upwards, and for a SmartMedia Card the gold-coloured contact points must be facing upwards.

Note: To remove the CompactFlash card again, press the 'EJECT' button (D, figure 4). The SmartMedia Card can simply be pulled back out.

Note: The memory cards can only be placed into the slot in one way. Do not force the cards into the slot; this can damage both the card and the Photo Viewer.

Note: The Photo Viewer supports CompactFlash cards from 8MB to 1GB and SmartMedia Cards from 4MB to 128MB.

4. After a few moments, the first photo that the Photo Viewer finds on the memory card will appear on the TV. Use the 'PREVIOUS' and 'NEXT' buttons (A and B, figure 3) to browse through the photos on the memory card.
5. Press the 'SLIDE SHOW' button (D, figure 3) to start a slide presentation. Press this button again to stop the slide show.

6.2 Remote Control

See the table below for a description of the various functions of the remote control. Figure 5 also shows you how to do this.

Button	Function	Description
A	Power	Switch the Photo Viewer on / off.
B	Rotate	Turn the photo clockwise through 90 degrees.
C	Up	- Go to the previous photo. - In 'zoom' mode, pan the picture upwards. - In the OSD menu, move up. - In 'preview' mode, move 16 pictures upwards.
D	Right	- In 'zoom' mode, pan the picture to the right. - In the OSD menu, activate the selected function. - In 'preview' mode, move 16 pictures to the right.

TRUST PHOTO VIEWER

Button	Function	Description
E	Menu	Call up the OSD menu or close it again. See chapter 6.3 for more information.
F	Down	- Go to the next photo. - In 'zoom' mode, pan the picture downwards. - In the OSD menu, move downwards. - In 'preview' mode, move 16 pictures downwards.
G	Left	- In 'zoom' mode, pan the picture to the left. - In 'preview' mode, move 16 pictures to the left.
H	Slide Show	Start or stop the slide show feature. Note: You will need to stop the slide show before you can use the other features again.
I	Zoom	Magnify the picture to 200% or back to normal size. Use the arrow keys to pan the picture. Note: You will need to zoom back to the normal picture size before you can use the other features again.
J	Preview	Display up to 16 photos simultaneously or switch back to the selected photo.

6.3 OSD menu

- To call up the OSD (On Screen Display) menu, press the 'MENU' button on the remote control (E, figure 5).
- Press the 'UP' and 'DOWN' buttons (C and F, figure 5) to browse through the menu functions. See the table below for an overview of the various functions.
- Press the 'RIGHT' button (D, figure 5) to select the function or the 'LEFT' button (G, figure 5) to exit the function.

Function	Description
Card Source	Here you can select the memory card that the photos are on. You can choose between CompactFlash and SmartMedia Card.
Picture Info	Switch this feature 'ON' to display information about the photo at the bottom of the screen, such as frame number, date, time, image size and resolution. Select 'OFF' to switch the information off again.
Display Mode	Here you can select 'Full Screen' to show the photo covering the entire screen, or 'True Image' to display the photo at its actual size.
B/W	Select 'ON' here to display the photo in black and white. Select 'OFF' to display the photo in colour again.
Slide Delay	Here you can set the frame delay in the 'Slide Show' mode. To do this, you can choose from the following options: - Fast: a delay of 4 seconds between photos - Normal: a delay of 6 seconds between photos - Slow: a delay of 8 seconds between photos
Erase Photo	Select 'YES' at this point to delete the displayed photo permanently from the memory card. Select 'NO' to cancel.

TRUST PHOTO VIEWER

Function	Description
Language	Select the language you want to use for the OSD menu. You can choose from: English, Chinese, French, German, Spanish, Italian, Dutch, Polish or Portuguese.



Note: *The above functions have been shown in the English language; they may appear differently if another OSD language is selected.*

7 Trust cameras

The table below lists a number of Trust cameras with which you are able to use an optional SmartMedia Card or CompactFlash memory card. These can also be used in combination with the Trust Photo Viewer.

Note: *The Photo Viewer supports all cameras that store photos in JPEG (exif) format at resolutions up to 2400x1800 (4.3 Mpixel).*

Item no.	Camera model	Memory
11099	Trust PhotoC@m LCD	CompactFlash
11253	Trust PhotoC@m LCD Pro	CompactFlash
12098	Trust PhotoC@m 1300	SmartMedia Card
12099	Trust PhotoC@m LCD 2300	SmartMedia Card
12913	Trust 510FX FamilyC@m	SmartMedia Card
13156	Trust 500FX PowerC@m Flash	SmartMedia Card
13288	Trust 610 LCD PowerC@m Zoom	SmartMedia Card
13326	Trust 710 LCD PowerC@m Zoom	SmartMedia Card
13327	Trust 620 LCD PowerC@m Zoom	CompactFlash
13338	Trust 532AV Power Video	CompactFlash
13339	Trust 632AV LCD Power Video	CompactFlash
13489	Trust 715 LCD PowerC@m Zoom	SmartMedia Card

8 Troubleshooting

Method

1. Read the solutions given below.
2. Check for up-to-date FAQs, drivers and instruction manuals on the Internet (www.trust.com/13487).



Problem	Cause	Possible solution
No picture.	The TV is not switched on.	Switch the TV on.
	The Trust Photo Viewer is not switched on.	Switch the Photo Viewer on.
	Cables not connected properly.	Connect the cables correctly (see chapter 4).
	TV not set to the correct video input.	Set the correct video input. See the instruction manual for your TV.
	No memory card has been inserted.	Place a CompactFlash or SmartMedia Card in the Photo Viewer.
	No photos on the memory card.	Take some photos first with your digital camera.
	The photos on the memory card are at a higher resolution than 4.3 Mpixel (2400x1800).	Take photos at a resolution of no more than 4.3 Mpixel (2400x1800).
	The photos on the memory card are not in JPEG (exif) format.	Use a different digital camera that supports the JPEG (exif) format.
The remote control does not work.	There is no battery in the holder, or it is empty.	Insert or replace the battery (see chapter 5).
	Protective plastic tab is still in the battery holder.	Remove the plastic tab (see chapter 5).
Some of the buttons on the remote control are not working.	Slid Show feature is still running.	First switch off the Slide Show feature.
	Zoom function is still in use.	First switch off the Zoom function.

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information on the back of this instruction manual. Please have the following information available:

- The article number. This is 13487 (13488 for the UK version);
- A good description of what does not work;
- A good description of when the problem occurs.

9 Warranty conditions



- Our products have a two-year manufacturer's warranty, which is effective from the date of purchase.
- If there is a fault, return the product to your dealer and include an explanation of the fault, the proof of purchase and all the accessories.
- During the warranty period, you will receive a similar model from the dealer, if one is available. If no similar product is available, your product will be repaired.
- Please contact our help desk for missing components, such as the instruction manual, software or other components.
- The warranty becomes invalid if the product is opened, if there is mechanical damage, if the product has been misused, if alterations have been made to the product, if the product has been repaired by a third party, in the case of negligence or if the product has been used for a purpose other than that originally intended.
- Excluded from the warranty:
 - Damage caused by accidents or disasters, such as fire, flood, earthquakes, war, vandalism or theft.
 - Incompatibility with other hardware/software which is not stated in the minimum system requirements.
 - Accessories such as batteries and fuses (where applicable).
- Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses resulting from the use of this product.