

<u>Instructions when using for the first time</u>	Chapter	
1. Connecting	(4)	<b>!</b>
2. Inserting a battery into the remote control	(5)	
3. Use	(6)	



## 1 Introduction

This instruction manual is for users of the TRUST PHOTO VIEWER. The TRUST PHOTO VIEWER can be used to view photographs on your TV that you have taken using a digital camera.

The Photo Viewer supports memory cards on which photographs up to a maximum resolution of 2832 x 2128 (6 Mpixel) have been saved in the JPEG (exif) format.

You can use the remote control supplied with the Photo Viewer to zoom in on the photographs, rotate them through 90 degrees, start a slide show, display up to 16 photographs simultaneously on your TV and browse through them or use the OSD menu.

The Trust Photo Viewer has a compact size, so that you can also easily take it with you and view your holiday photographs when visiting family and friends.

### 1.1 Memory cards

The memory cards supported by the Photo Viewer are given in the table below. The table also explains how the cards must be inserted into the Photo Viewer (see figure 3).

Memory card	Abbreviation	Max. size	Insert
Compact Flash Type I/II	CF	8 MB to 1 GB	Facing upwards.
IBM MicroDrive	MD	340 MB to 1 GB	Facing upwards.
Memory Stick	MS	8 MB to 128 MB	Angled corner on the left-hand side.
Smart Media Card	SMC	8 MB to 128 MB	Contact facing upwards and the angled corner on the right-hand side.
Secure Digital	SD	8 MB to 256 MB	Angled corner on the right-hand side.
MultiMedia Card	MMC	8 MB to 128 MB	Angled corner on the right-hand side.

**Comment:** *Technology does not stand still. It is, therefore, possible that newer or larger memory cards will not be supported by this device.*

## 2 Safety

Carefully read the following instructions before use.

- The TRUST PHOTO VIEWER does not require any special maintenance. Use a slightly damp, soft cloth to clean the casing.
- Do not use aggressive substances, such as white spirit, to clean the device. These may harm the material.

## TRUST PHOTO VIEWER

---

- Do not submerge the device in liquid. This may be dangerous and will damage the device. Do not use the device near water.
- Make sure nothing is placed on the cable. Do not use this device where the cable can become worn or damaged as a result of people walking over it.
- Do not repair this device yourself. If you open this device, you may touch live components.
- Under the following circumstances, have the device repaired by qualified personnel:
  - The cable or plug is damaged or worn.
  - The device has come into contact with rain, water or another liquid.

### 3 Approval



This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/13487/ce](http://www.trust.com/13487/ce).

### 4 Connecting

Follow the instructions below to connect the Trust Photo Viewer to your TV (see figure 1).

1. Connect the plug (B) of the 12 VDC/600 mA power adapter (A) to the DC-IN socket (C) at the rear of the Photo Viewer.
2. Connect the plug (G) of the composite video cable to the yellow VIDEO connector (E) at the rear of the Photo Viewer.
3. Connect the other plug (H) of the composite video cable to the composite video input of your TV (yellow cinch plug).

If your TV does not have a composite video input (yellow cinch plug), then you should connect the video cable's plug (H) to the connector (I) of the SCART converter plug (J). Connect the SCART plug (J) to your TV.

If the TV has an S-VIDEO input, you could also connect the Photo Viewer to your TV via the S-VIDEO connection (D). S-VIDEO gives better quality than composite video.

**Note:** *You cannot connect the composite video cable to your TV's aerial connection.*

**Note:** *An S-VIDEO cable is not supplied with the Photo Viewer. You can purchase this cable from your local TV shop.*

4. Set the PAL/NTSC switch (F) at the rear of the Photo Viewer to the correct setting.

PAL: European TV standard  
NTSC: American and Japanese TV standard.

**Note:** *Read the instruction manual provided with your TV to find the correct TV standard. Nowadays, most TVs support both PAL and NTSC.*

5. Connect the power adapter (A) to the mains supply.

It is also possible to connect the Photo Viewer to your computer or to an LCD projector if they have a composite video input or an S-VIDEO input.

**Note:** *It is not possible to copy photographs from the memory card to your computer using the video cable. Use a card reader to do this, such as the Trust 630 USB2 Card Reader (item no. 13678).*

## 5 Battery

Follow the instructions given below to insert a battery into the remote control or to replace an old one (see figure 2).

**Note:** *When you take the remote control out of its packaging for the first time, the battery holder will contain a protective plastic tab (D). You will need to remove this before you can use the remote control.*

1. Turn the remote control (A) upside down.
2. Push the battery holder clip (C) to the right and lift the battery holder out.
3. Insert/replace the 3 VDC CR2025 battery (B), making sure the battery's positive terminal (+) is facing upwards.
4. Push the battery holder back onto the remote control.

## 6 Use

### 6.1 Basic use

Follow the instructions given below to operate the various functions of the base station.

1. Turn on your TV and select the video input that the Photo Viewer has been connected to (composite video, S-VIDEO or SCART input). See the instruction manual provided with your TV for instructions on how to select the correct video channel.
2. Press the POWER button on the top of the base station to turn on the Photo Viewer. The red LED will light up and the startup screen with the Trust logo will appear on the TV, followed by the message 'NO CARD'. The LED will change from red to green.
3. Insert a memory card into the correct slot (see figure 3). A number of memory cards can be inserted into the device at the same time, such as a combination of SMC, SD and CF cards. You can select the memory card you wish to use from the menu (see chapter 6.3).

**Note:** *You cannot copy photographs from one memory card to another when a number of memory cards have been inserted into the Photo Viewer at the same time.*

**Note:** *The memory cards can only be inserted into the slot in one way. Do not force the cards into the slot. This could damage both the card and the Photo Viewer (see figure 3).*

4. After a few moments, the first photograph that the Photo Viewer finds on the memory card will appear on the TV. Use the PREVIOUS and NEXT buttons to browse through the photographs on the memory card. The LED will flash green whilst the photographs are being read on the memory card.
5. Press the SLIDE SHOW button to start a slide presentation. Press this button again to stop the slide show.

A black rectangular box containing the white letters 'U' and 'K' stacked vertically.

## TRUST PHOTO VIEWER

**Note:** The cards can be easily removed from the memory slot. Remove the cards carefully.

**Note:** Do not remove a memory card whilst the LED is flashing green.

### 6.2 Operation

See the table below for a description of the various functions of the remote control and the base station.

Function	Description
Power	Turns the Photo Viewer on and off.
Zoom	Increase the size of the photograph to 200%. Use the arrow keys to move through the photograph. <b>Note:</b> You will need to return the photograph to the normal size before you can use the other functions again.
Preview	Displays up to 16 photographs simultaneously or returns to the selected photograph. In the 16 photograph mode, you can use the NEXT and PREVIOUS buttons to skip to the next/previous 16 photographs. Use the arrows to select a photograph and press ENTER to view the full size photograph.
Rotate	Rotates the photograph clockwise through 90 degrees.
B/W	Changes the photograph from colour to black-and-white. Press this button again to change the photograph back to colour.
Up/Down/Left/Right △ ▽ ◀ ▶	- Shifts the photograph in the direction pressed. - Selects a photograph in the 16 photograph mode.
Enter	This button is used to confirm a selection made in the OSD menu.
Menu	Calls up or closes the OSD menu. See chapter 6.3 for more information.
Next	- Displays the next photograph. - When in the 16 photograph mode, displays the following 16 photographs.
Previous	- Displays the previous photograph. - When in the 16 photograph mode, displays the previous 16 photographs.
Slide Show/Pause	Starts or stops the slide show. <b>Note:</b> You will need to stop the slide show before you can use the other functions again.
Delete	Deletes a photograph from the memory card. Use the LEFT, RIGHT and ENTER buttons to confirm or cancel the deletion of a photograph.

### 6.3 OSD menu

Press the MENU button on the remote control to call up the OSD (On Screen Display) menu.

Function	Description
Menu	Calls up or closes the OSD menu.
Up/Down △▽	- Selects a menu item by moving the cursor. - Alters the setting or value of the chosen menu item.
Left ◀	- Exits the displayed menu item. - Exits the settings window. The settings will not be saved.
Enter	Opens the selected settings window. Saves the settings and exits the settings window.

U K

Function	Description
Card Source	If a number of cards have been inserted into the Photo Viewer, you can select the memory card on which the photographs you wish to view have been saved.
Photo Information	Select 'ON' to display information about the photograph at the bottom of the screen, such as frame number, date, time, image size and resolution. Select 'OFF' to remove the information from the screen.
Slide Delay	Select a time delay (0 – 60 sec).
Display Mode	Select 'Full Screen' to show the photograph covering the entire screen, or 'True Image' to display the photograph in its actual size.
Transition Mode	You can select the way in which the photograph is displayed. The options are: at once, vertical scroll, scroll from outside to inside or scroll from inside to outside.
Language	Select the language you wish to use for the OSD menu. You can choose from: English, French, German, Spanish and Italian.

**Note:** *The above functions have been shown in English. They may appear differently if another OSD language has been selected.*

## 7 Troubleshooting

<b>Method</b>	
<ol style="list-style-type: none"> <li>1. Read the solutions given below.</li> <li>2. Check for up-to-date FAQ's and instruction manuals on the Internet (<a href="http://www.trust.com/13487">www.trust.com/13487</a>).</li> </ol>	<b>!</b>

<b>Problem</b>	<b>Cause</b>	<b>Possible solution</b>
<b>No picture.</b>	The TV has not been turned on.	Turn the TV on.
	The Trust Photo Viewer has not been turned on.	Turn the Photo Viewer on.
	The cables have not been connected properly.	Connect the cables correctly (see chapter 4).
	The TV has not been set to the correct video input.	Select the correct video input. See the instruction manual provided with your TV.
	No memory card has been inserted.	Insert a memory card into the Photo Viewer.
	There are no photographs on the memory card.	Take some photographs first with your digital camera.
	The photographs on the memory card have a resolution greater than 6 Mpixel (2832 x 2128).	Take photographs with a resolution of 6 Mpixel (2832 x 2128) or less.
<b>The remote control does not work.</b>	The photographs on the memory card are not in JPEG (exif) format.	Use a different digital camera that supports the JPEG (exif) format.
	A battery has not been inserted into the battery holder.	Insert or replace the battery (see chapter 5).
<b>Some of the buttons on the remote control are not working.</b>	The protective plastic tab is still in the battery holder.	Remove the plastic tab (see chapter 5).
	The slide show function is still running.	Turn off the slide show function.
<b>The whole photograph is not displayed.</b>	The zoom function is still in use.	Turn off the zoom function.
	The photograph has a resolution greater than 6 MegaPixel (2832 x 2128).	The Photo Viewer displays photographs in a maximum resolution of 6 Mpixel.
<b>"No .. Card" is displayed.</b>	The memory card has been removed from the Photo Viewer.	From the menu, select a 'Card Type' from the menu which is still inserted into the Photo Viewer (see chapter 6.3).

TRUST PHOTO VIEWER

<b>The menu cannot be opened.</b>	A memory card has not been inserted into the Photo Viewer.	Insert a memory card into the Photo Viewer.
<b>Different photographs are displayed than those on the memory card.</b>	A number of memory cards have been inserted into the Photo Viewer.	From the menu, select a 'Card Type' from the menu which is still inserted into the Photo Viewer (see chapter 6.3).



If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information at the back of this instruction manual. Please have the following information available:

- The item number. This is 13487 (13488 for the UK version).
- A good description of what does not work.
- A good description of when the problem occurs.

**7.1 LED status**

LED	Description
Red	The device has been turned on. It is initializing.
Green, constantly lit	The device is ready for use.
Green, flashing	The device is reading information from the memory card. Do not remove a memory card whilst the LED is flashing.

**8 Warranty conditions**

- Our products have a two-year manufacturer's warranty which is effective from the date of purchase.
- If there is a fault, return the product to your dealer and include an explanation of the fault, the proof of purchase and all the accessories.
- During the warranty period, you will receive a similar model, if one is available. If no similar product is available, your product will be repaired.
- Please contact our help desk for missing components, such as the instruction manual, software or other components.
- The warranty becomes invalid if the product has been opened, if there is mechanical damage, if the product has been misused, if alterations have been made to the product, if the product has been repaired by a third party, in the case of negligence or if the product has been used for a purpose other than that originally intended.
- Excluded from the warranty:
  - Damage caused by accidents or disasters, such as fire, flood, earthquakes, war, vandalism or theft.
  - Incompatibility with other hardware/software which is not stated in the minimum system requirements.
  - Accessories, such as batteries, fuses (if applicable).
- Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses resulting from the use of this product.