

**Product information**

**Connections**

Connection	Description
VGA IN	Connection from computer (VGA card).
PC AUDIO IN	Connection from sound card.
VGA OUT	Connection to the monitor.
STEREO OUT	Connection for the speakers.
TV OUT	Connection for the output (to the TV) video signal (yellow).
ANTENNA	Aerial connection.
DC-IN	Power adapter connection (12VDC/1A/12VA).
AUDIO-L IN	Connection for the AUDIO signal input (left).
AUDIO-R IN	Connection for the AUDIO signal input (right).
VIDEO IN	Connection for VIDEO input signal.
S-VIDEO IN	Connection for S-VIDEO input signal.

**UK**
**Control Panel**


	Description
CH+/UP	Channel up/Menu up.
CH-/DOWN	Channel down/Menu down.
VOL-	Decrease volume.
VOL+/ENTER	Increase volume/Menu confirmation.
MENU/ESC	Opens the menu.
FINE TUNE	Fine tuning.
POP SOUND SEL	Selects the sound source (Computer sound or sound from the POP windows). <b>Note:</b> <i>This function only works if the POP window has been activated.</i>
POP	- Picture On Picture mode. - Activates the POP window. - Alters the size of the POP window when this is active.
SOURCE	Source (PC/TV/VIDEO/S-VIDEO).
POWER	Turns the device on/off.

**Installation**



Buttons described in the instruction manual correspond to buttons on the remote control.  
Other buttons are detailed below.

- 1 Open the battery case by pressing on the cover and sliding it down and insert the batteries as indicated.
- 2 Switch off the computer.

- 3 Removes the VGA monitor cable of the VGA card.
  - A. Connect the provided VGA cable to the VGA IN and connect the other end to the VGA card of your computer.
  - B. Connect one end of the 3.5 mm audio cable to PC AUDIO IN and connect the other end to your computer's speaker output. In newer sound cards this is green.
- 4
  - C. Connect the VGA monitor cable to VGA OUT.
  - D. Connect your speakers to the device's STEREO OUT connection.
  - E. Connect the aerial cable.
  - F. Connect the power adapter and plug it in to an electrical outlet.
- 5 Switch the PC on and TRUST COMBI TV-PC POP VIEW.

 The TRUST COMBI TV-PC POP VIEW will turn on in the TV mode by default. As a result, the computer image will be replaced by a snowy image.

#### Selecting the TV system

 The TRUST COMBI TV-PC POP VIEW is set to PAL B/G by default.  
Please carry out the steps below if you would like to change the system.


- 6 Press the MENU/ESC button on the device. A menu will appear on the screen.
- 7 Use the CH-/DOWN button to scroll to option 3 (TV FUNCTION) and press the VOL+/ENTER button to go to the next menu.
- 8 Press the VOL+/ENTER button again to go to the next menu.  
In this new menu, use the CH-/DOWN button to select the system you wish to use.
- 9 Press the VOL+/ENTER button to save your choice.  
Press the MENU/ESC button to close the menu.

Country	Colour	TV
United Kingdom	PAL	I
Germany *	PAL	B/G
France	SECAM	E/L
Italy	PAL	B/G
Spain	PAL	B/G
Poland	PAL	D/K
Netherlands	PAL	B/G
Portugal	PAL	B/G
Greece	PAL	B/G

Country	Colour	TV
Denmark	PAL	B
Sweden	PAL	B/G
Hungary	PAL	B/G + D/K
Czech	SECAM / PAL	D/K
Slovakia	SECAM / PAL	D/K
Finland	PAL	B/G
Norway	PAL	B/G
Turkey	PAL	B
Russia	SECAM	D/K

\* Germany (previously East: SECAM / PAL B/G)

#### Find TV channels

 Repeat step 6+7

- 10 Use the CH-/DOWN button to scroll to option 4 (AUTO SCAN) and press the VOL+/ENTER button to start searching for channels.

#### Fine tuning of TV channels

- ⚠ The image of some channels may not be very clear or may contain noise. In many cases, this can be rectified using the FINE TUNE option. Follow the instructions given below to fine tune the channel(s).


⚠ Repeat step 6+7

- 11 A. Use the CH-/DOWN button to scroll to option 3 (FINE TUNE) and press the VOL+/ENTER button to start searching for channels.  
 B. You can adjust the fine tuning with the VOL - and VOL+/ENTER buttons. The new settings will be saved automatically.

**Arrange the TV channels in the desired order (with remote control)**

Example:

The TRUST COMBI TV-PC POP VIEW has assigned BBC1 to channel 10, but you would like it to change it to channel 1:

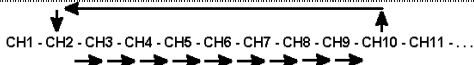

It can be moved to channel 1 as follows:

- 12 A. Select channel 10 (BBC 1) using the CH+/UP button.  
 B. Press the MENU button.
- 13 Press button 5 to select option 5 (CHANNEL CHANGE).
- ⚠ The following text will now appear: "Input Change Channel.  
 14 Now enter in the channel where you want to save BBC1 using the remote control. For this example, this is channel 1.
- 15 A. Press the ENTER button to confirm the choice.  
 B. Press the MENU button to clear the menu from the screen.

**Full screen image or picture-on-picture (POP)**

- ⚠ Before you can use the POP mode, you must set your monitor to a resolution of 640 x 480 pixels, 800 x 600 pixels or a maximum resolution of 1024 x 768 pixels at 60 Hz or 75 Hz. Please consult your Windows User's Manual.  
 The POP mode will not work if it is set to a higher resolution.

- 16 Press the SOURCE button to set the TRUST COMBI TV-PC POP VIEW to PC mode. The PC indicator will light up.
- 17 Press the POP button. A POP screen will appear.  
 Press the SOURCE button to call up a TV image.
- 18 Each time the POP button is pressed, the POP window will be reduced in size until a window is no longer visible and only the computer image remains.

**Move the POP window**

19 Press the MENU button.

20 Press the VOL- button to move the window to the left and press the VOL+/ENTER button to move it to the right.

21 Press the CH+/UP button to move it up and press the CH-/DOWN button to move it down.

**POP SOUND SEL**

Use the POP SOUND SEL option to select which noise you wish to hear, either the computer or the TV. The default setting is the computer sound. The TV sound will not be heard.

If you wish to hear the TV sound, press the POP SOUND SEL button on the remote control or on the device.

**Remote Control****Time function (Time)**

The time function can be used to set the times between which the device is used.

This function is activated by pressing the TIME button on the remote control.

To alter the settings in the menu which is displayed, use the CHANNEL button to scroll through the menu and the VOLUME button to alter the settings.

**Sleep mode (Sleep)**

The sleep mode turns the device off if a TV signal is no longer received. The device is turned off after a set period of time.

This time can be set between 0 and 120 minutes, in steps of 20 minutes.

**OSD**

If you press the OSD button on the remote control, a window will be displayed which displays information about the TV channel, such as the resolution, channel number, etc.

**MUTE**

You can turn off the sound by pressing the MUTE button. You can turn the sound back on by pressing the MUTE button again.

**RESET**

You can delete all the settings, such as the image and sound settings, by pressing the RESET button. The device will then be returned to the default settings.

The channel order will, however, remain the same.

Be careful when using pressing this button.

**Connecting other sources**

Other sources can also be connected to the TRUST COMBI TV-PC POP VIEW, such as a DVD player, video recorder, video camera, etc. These can be connected in two different ways: composite or S-VIDEO

## TV-1800 PCTV Tuner

**Trust**

### Composite (VIDEO)

This must be connected to the composite connection on the side of the device using a composite cable (not supplied).

**UK**

### S-VIDEO

You can also connect devices such as a DVD player, video recorder, video camera, etc. to the device's S-VIDEO input using a S-VIDEO cable (not supplied).

### Source mode

Turn on the device by pressing the POWER button on the remote control or the device.

The red POWER indicator on the device will be lit.

As already explained, the TRUST COMBI TV-PC POP VIEW will turn on in the TV mode by default. The red TV indicator will, therefore, be lit at the same time as the POWER indicator.

Press the SOURCE button on the remote control or the device to change the source.

The diagram below shows the steps of the various modes.



The TV indicator will be lit when the TV mode has been selected.

The PC indicator will be lit when the PC mode has been selected.

Only the POWER indicator will be lit when the VIDEO or S-VIDEO mode has been selected.

### Energy

- Do not recharge the batteries provided and do not throw them in onto a fire.
- Observe the local regulations when disposing of the batteries.

### Troubleshooting

You can visit [www.trust.com/13684](http://www.trust.com/13684) (EU version) or [www.trust.com/13698](http://www.trust.com/13698) (UK version) for the latest FAQ, executive programmes and instruction manuals.

### Safety instructions

- Never open or repair this device yourself.
- Do not use the device in a damp environment. Clean the device with a dry cloth.

### 

- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/13684/ce](http://www.trust.com/13684/ce) or [www.trust.com/13698/ce](http://www.trust.com/13698/ce).

### Warranty & copyright

#### TV-1800 PCTV Tuner



- This device has a two-year product warranty which is valid from the date of purchase. Go to [www.trust.com/warranty](http://www.trust.com/warranty) for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.

UK