

UK

HOW TO UPDATE FIRMWARE

Firmware solves item of "audio and video not synchronic when playback the video on the computer".

- Note:** Driver camera function (PC-CAM) must be installed. Manual chapter 10.9!!
- Note:** Check battery is full. Turn off camera, or disconnect during FW upload can damage camera!!


INSTALLATION Firmware update program

- 1) Download file "13849_FW.exe" from Trust Internet site.
- 2) Run the downloaded file. Program starts to install automatically.


EXECUTING Firmware update program

- 1) Connect camera --> USB port computer
Turn on camera.
Press "Func" button (camera) to switch to "PC-CAM" mode
- 2) Start program "Trust Firmware Update V1.01"
(Located @ desktop and/or Start-Programs-Trust Firmware Update)


- 3) Click "Browse"

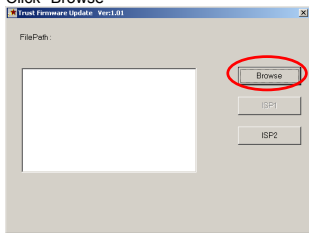

- 4) Select file "13849_V34.BIN".
Click "Open"

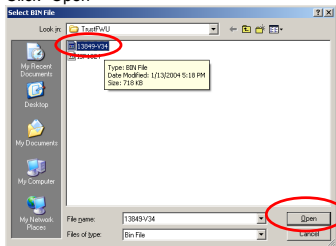

- 5) Press "ISP2" button. Starts Firmware Upgrade

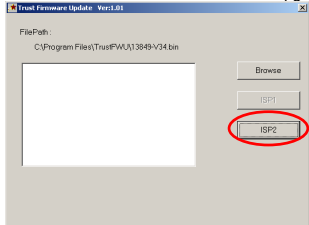

- Note:** Upgrade takes some time. Be sure the camera remains connected and cannot turn off due empty battery!!
- Note:** Be sure the cable cannot be disconnected from the camera/computer.

- 6) Click "YES" for notification "Are you sure to down the file to your camera?"
The firmware starts now. It takes about 5 minutes



--> Firmware Upgrade finished; (LED is flashing)

- 7) Press "OK" and close program "Trust Firmware Update"
- 8) Disconnect camera from computer.
Turn off the camera by remove battery.
Insert battery and close battery cover.
- 9) Uninstall the Trust firmware program.

Camera can now be used with original driver. When playback video/audio file now, it is synchronic.