


1

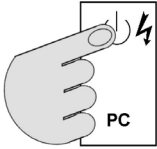


WINDOWS 98SE/ME




3

2


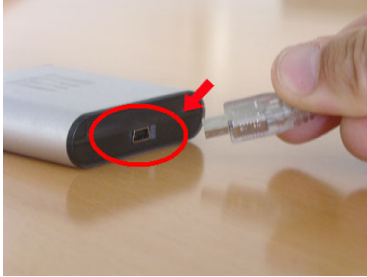


Only WINDOWS 2000/XP



3

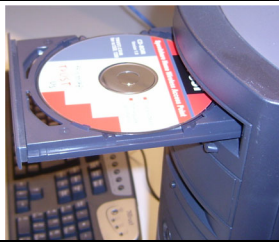

4

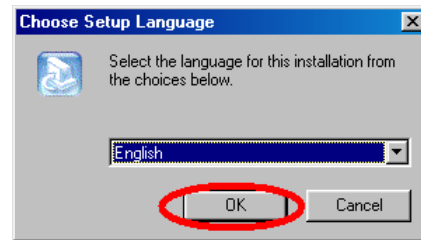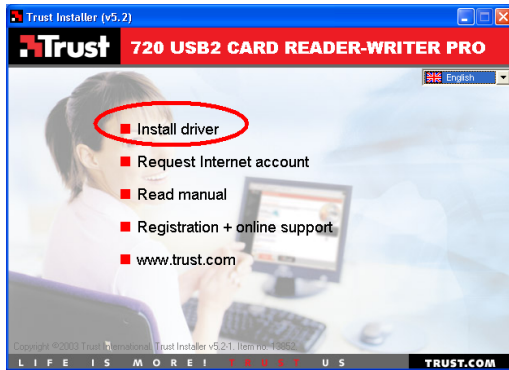

5

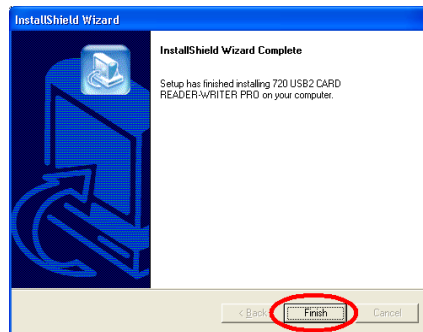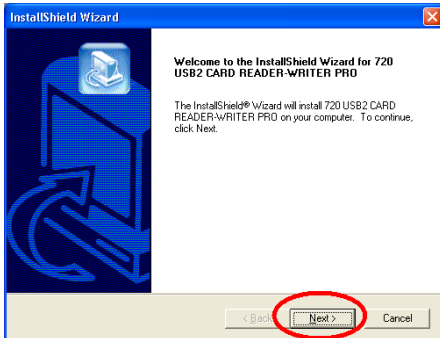


Windows XP/2000



8


6

Only Windows 98


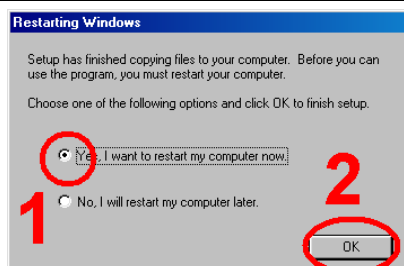


Only Windows 98/ME


7

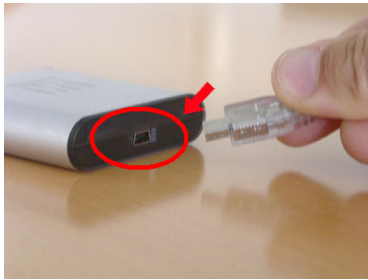


8

 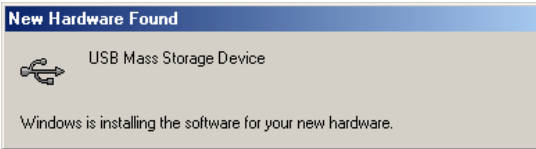

**Windows 98/ME/2000
Windows XP + SP1**

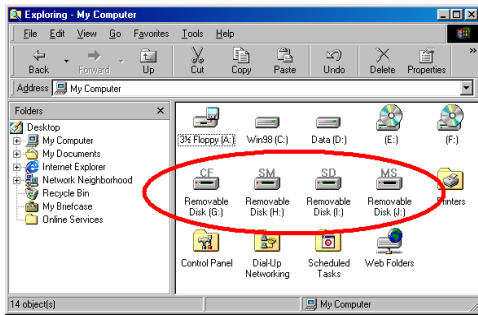

Windows XP - SP1

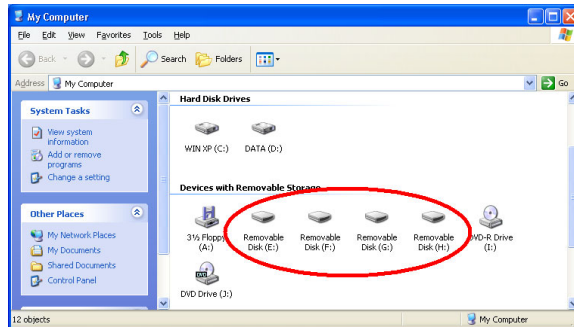


9


Smartmedia card




MS / MSPro stick

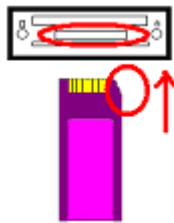

SD / MMC card

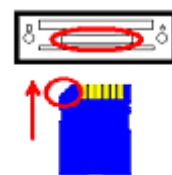


CF card / Microdrive

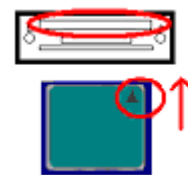

10


Windows 98 / Me / 2000 / XP + SP1

**+
Memory Stick**

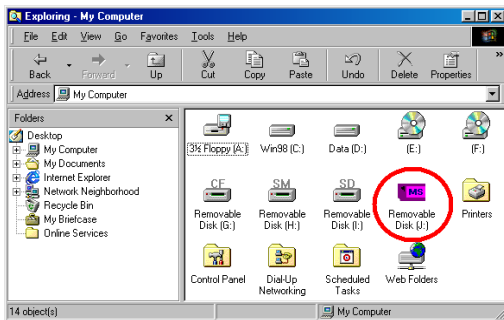

Windows 98 / Me / 2000 / XP + SP1

**+
Compact Flash & Secure Digital &
Smartmedia card**

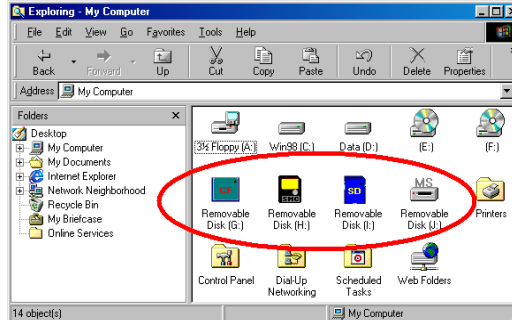

11