








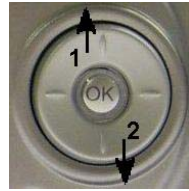
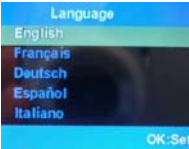



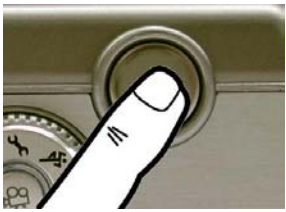







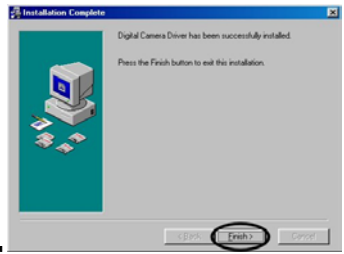
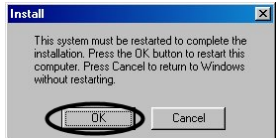

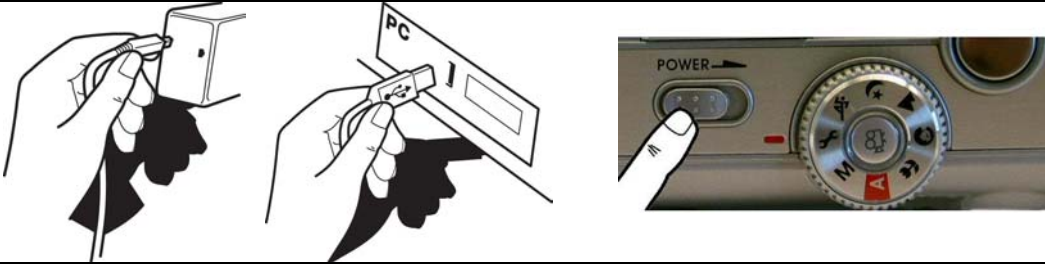


<p><b>1</b></p>			 <p>Recommended: NiMH Rechargeable (min 1800mAh)</p>		
<p><b>2</b></p>	 <p>Remove Cover</p>	 <p>POWER →</p> <p>⌚ 4 sec</p>			
<p><b>3</b></p>	 <p>"1" = up "2" = Down "Ok" = Select</p>	 <p>Select "Language" Press "OK"</p>	 <p>Select "Exit" Press "OK"</p>	<p><b>SETUP</b></p>	
<p><b>4</b></p>	 <p>Set "A"</p>				
<p><b>5</b></p>	 <p>Press "▶"</p>		 <p>"1" = Previous "2" = Next</p>	<p>⌚ → 3 sec</p> 	
<p>Windows 98 → 7;</p>		<p>Windows ME / 2000 / XP → 8</p>			
<p><b>6</b></p>	<p>Windows 98</p>  <p>■ Install driver</p>	 <p>Installation Complete Digital Camera Driver has been successfully installed. Press the Finish button to exit this installation.</p>	 <p>Install This system must be restarted to complete the installation. Press the OK button to restart this computer. Press Cancel to return to Windows without restarting.</p>	<p>Windows 98</p> 	


7



Windows  
XP, 2000,  
ME, 98

max. 60 sec


8A

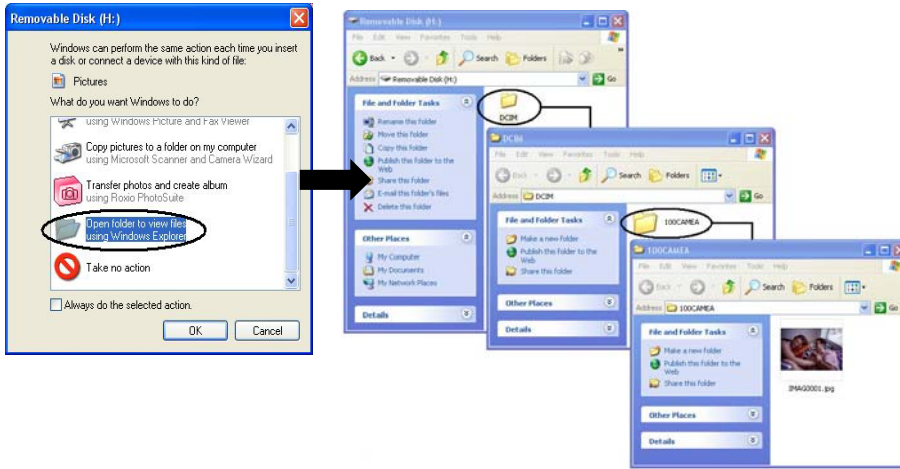

Open file;  
 30 sec.

Windows  
XP

8B

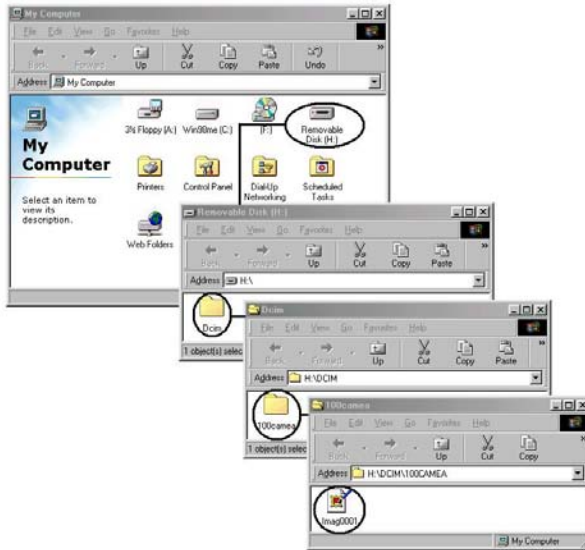

Open file;  
 30 sec

Windows  
98, ME,  
2000

**FINISHED**