

<p>1</p>			<p>Recommended: NiMH Rechargeable (min 1800mAh)</p>		
<p>2</p>	<p>Remove Cover</p>	<p>POWER →</p> <p>⌚ 4 sec</p>			
<p>3</p>	<p>"1" = up "2" = Down "Ok" = Select</p>	<p>Language</p> <p>English Français Deutsch Español Italiano</p> <p>OK: Set</p> <p>Select "Language" Press "OK"</p>	<p>Date & Time</p> <p>Date: 01/ 01/ 2003 Time: 12: 26 am Mode: MM/DD/YYYY 12hr</p> <p>OK: Set</p> <p>Select "Exit" Press "OK"</p>	<p>SETUP</p>	
<p>4</p>	<p>Set "A"</p>				
<p>5</p>	<p>Press "▶"</p>		<p>"1" = Previous "2" = Next</p>	<p>⌚ → 3 sec</p>	
<p>Windows 98 → 7;</p>		<p>Windows ME / 2000 / XP → 8</p>			
<p>6</p>	<p>Windows 98</p> <p>■ Install driver</p>	<p>Installation Complete</p> <p>Digital Camera Driver has been successfully installed.</p> <p>Press the Finish button to exit this installation.</p> <p>Finish</p>	<p>Install</p> <p>This system must be restarted to complete the installation. Press the OK button to restart this computer. Press Cancel to return to Windows without restarting.</p> <p>OK Cancel</p>	<p>Windows 98</p>	

