


<p>1</p>				
<p>2</p>				
<p>3</p>				
<p>Windows XP / 2000 → 5 Windows 98SE / ME → 4</p>				
<p>4</p>	<p>Windows Me / 98SE:</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="220 1534 746 1917"> </div> <div data-bbox="794 1534 1321 1917"> </div> </div> <p>⚠ No driver required! (Uses standard Windows driver) ⚠ Windows CD-ROM may be required!</p>			<p>Windows Me/ 98SE</p>

5			<p>Windows XP / 2000 → 6</p> <p>Windows Me/98SE → 7</p>	<p>Check Card</p>
----------	--	--	---	--------------------------

6	<p>Windows XP / 2000:</p>		<p>Check Card</p> <p>Windows XP/2000</p>
<p>NEXT → 8</p>			

7	<p>Windows Me/98SE:</p>		<p>Check Card</p> <p>Windows ME/98SE</p>
----------	--------------------------------	--	--


8

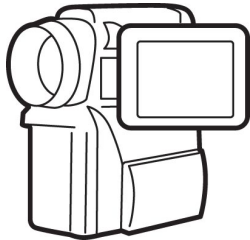

1394 Firewire camera, external HDD/CD-ROM case etc.




Max.
4.5 m

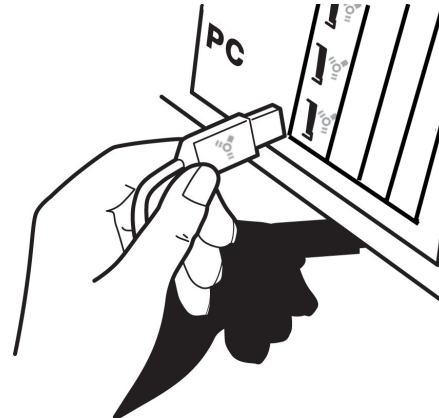

**Connect
1394
Firewire
device**

FINISH

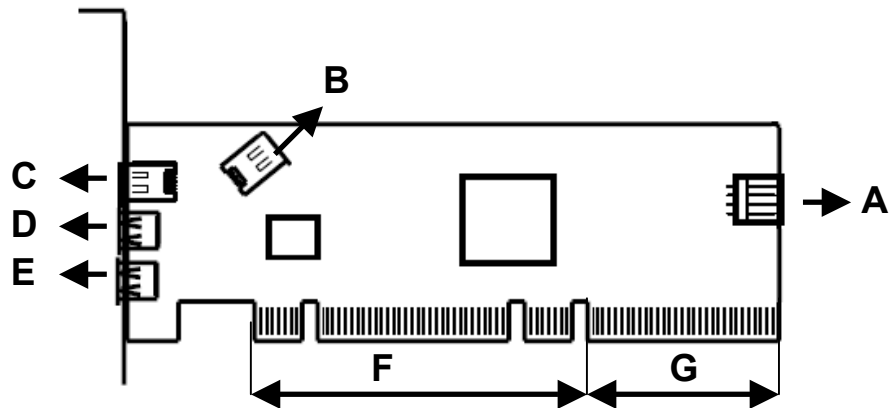

Item:	Description:	Function:
A	Internal power connection	For additional power (recommended when more than 2 FireWire device connected)
B	6 pin 1394a Firewire (400Mbps) connection	To connect 1394a Firewire device
C	9-pin 1394b Firewire shielded twisted pair copper (800 MB Mbps)	To connect 1394b Firewire device
D		
E		
F	PCI-32 connection	For connecting to PCI-32 slot
F+G	PCI-64 connection	For connecting fo PCI-64 slot

	<p>Read manual Handbuch lesen Lire le manuel Leggere il manuale Leer el manual Lees handleiding</p>	
	Read manual from Fireiwire camera, external HDD or CD-ROM case or other Firewire device	
	No driver required! (Uses standard Windows driver)	
	Windows CD-ROM may be required!	
	Recommended: use internal power when using more than 2 FireWire devices	
	Max. 63 FireWire devices per port	
	Windows 98SE -> Download latest patches first: http://www.microsoft.com/windows98/downloads/contents/WURecommended/S_WUFeatured/1394/Default.asp	