



**Product information**

<b>A:</b> Indicator	This is lit when the tablet has been installed correctly.
<b>B:</b> Functions buttons	These have the same function as the keyboard function buttons. The driver must be installed in order to use these buttons.
<b>C:</b> Pen holder	Holder for the pen when it is not in use.
<b>D:</b> Work area	Area for making a drawing
<b>E:</b> Pen point	The same as the left mouse button
<b>F:</b> Same button	The same as the middle mouse button
<b>G:</b> Pen button +Battery-low indicator LED	The same as the right mouse button
 Only for Tablet TB-2100, TB-3100 and TB-4200	
<b>H:</b> Left mouse button	
<b>I:</b> Middle mouse button (TB-4200: +scroll)	
<b>J:</b> Right mouse button	

UK

**Installation**

- 1 **A:** Insert the battery into the pen  
**B:** Insert the battery into the mouse  Only for Tablet TB-2100, TB-3100 and TB-4200
- 2 Turn on PC
- 3 Insert CD-ROM into the CD drive
- 4 Click 'Install driver'
- 5 Click 'Next'
- 6 **A:** Select 'Yes, I want to restart computer now'  
**B:** Click 'Next'
- 7 Connect tablet to PC
- 8 Click 'Yes' to restart PC

**Configuration**

- 9 Double-click on the tablet icon in the taskbar
- 10 Click "Buttons" tab.
- 11 **A:** Configures the function of button 1 **C:** Restores the default settings  
**B:** Configures the function of button 2 **D:** Configures the pen's click pressure  
Click 'Test' to test Pen settings  
- Click on 'Test' to test the pen's click pressure
- 12 - Click on the 'X' in the top right-hand corner to close the window  
- Click 'Mouse' tab  
**A:** Mouse pointer speed **C:** Function of the middle mouse button
- 13 **B:** Configuration for left-handed or right-handed use  
Click 'Control' tab
- 14 The work surface can be configured to use centimetres (cm) or inches (inch),  
Click 'Function Key' tab




15

Not all the tablet models have the same number of function buttons.  
Model TB-1100: F1 to F8 / Model TB-2100 and TB-3100: F1 to F12 / Model TB-4200: F1 to F24


The function buttons are the same as the function buttons on your keyboard.  
Click 'Page Down' button to see function buttons F9 to F24

### Re-define Function Keys

16

Click on the button  of one of the function buttons

17

 'Windows Messenger' is used here as an example. You may, of course, use a different program.  
Click on the 'Windows Messenger' icon and then on 'Open'

18

Click 'OK' to save settings

### Note

Go to [www.trust.com/12050](http://www.trust.com/12050) (Tablet TB-1100) / [www.trust.com/12052](http://www.trust.com/12052) (Tablet TB-2100) / [www.trust.com/12579](http://www.trust.com/12579) (Tablet TB-3100) or [www.trust.com/14070](http://www.trust.com/14070) (Tablet TB-4200) for up-to-date FAQs, instruction manuals and more information.



### Safety instructions

- Never open or repair this device yourself.
- Do not use this device in a damp environment.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/12050/ce](http://www.trust.com/12050/ce) (Tablet TB-1100); [www.trust.com/12052/ce](http://www.trust.com/12052/ce) (Tablet TB-2100); [www.trust.com/12579/ce](http://www.trust.com/12579/ce) (Tablet TB-3100); [www.trust.com/14070/ce](http://www.trust.com/14070/ce) (Tablet TB-4200).



- If possible, dispose of the device at a recycling centre. Do not dispose of the device with the household waste.

### Warranty & copyright

- This device has a two-year product warranty, which is valid from the date of purchase. Go to [www.trust.com/warranty](http://www.trust.com/warranty) for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.