 


Windows XP SP2 :




4


Windows XP SP1, Windows 2000:




6

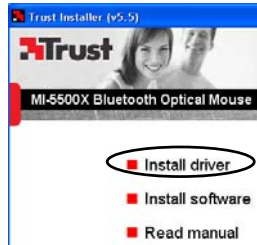

7

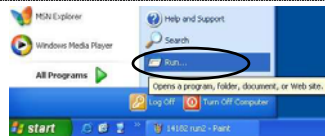

8

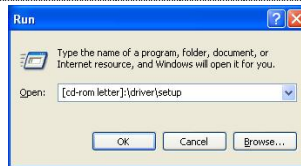


9



10



11

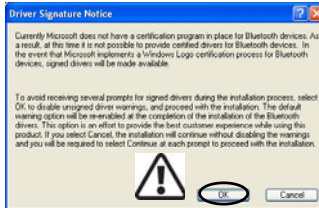

12




WINDOWS XP SP2 → 13

WINDOWS XP → 16

WINDOWS 2000 → 15


WINDOWS XP SP2: UNPLUG BT ADAPTER

13

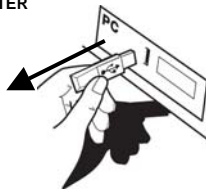

WINDOWS XP SP2: REPLUG BT ADAPTER

14

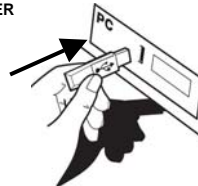

WINDOWS XP SP2 → 16

 **ONLY IN WINDOWS 2000**


15



16




17

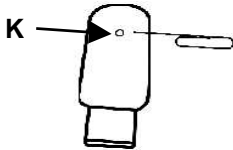

18




19

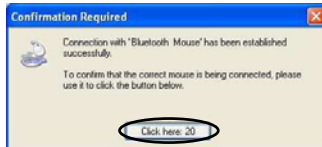

20




21

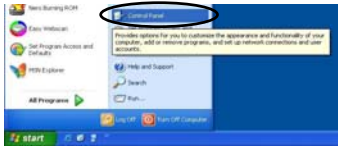

22



23

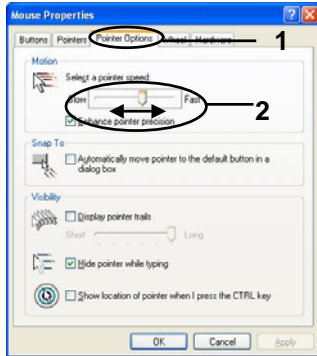

24



- 1 Install driver
- 1 Install software
- 2 Read manual