




## PW-2050 BATTERY POWER TESTER


### Testing of batteries :

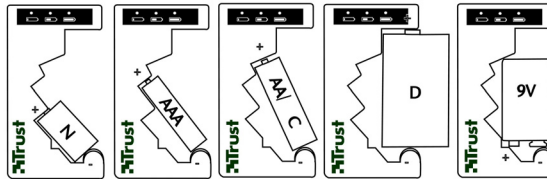

### Technical specifications :

		1.5 V batteries	9 V batteries
	EMPTY	0 – 1,1 V	0 – 6,6 V
	HALF	1,1 – 1,3 V	6,6 – 7,8 V
	FULL	> 1,3 V	> 7,8 V

### Replace empty battery :

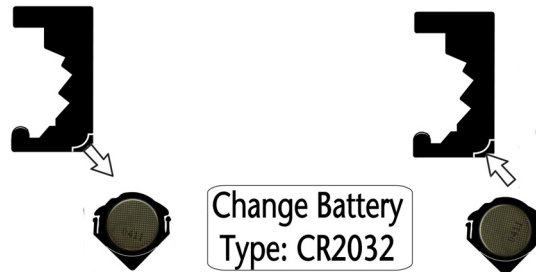

More information & FAQ : [www.trust.com/14418](http://www.trust.com/14418)

CE : [www.trust.com/14418/ce](http://www.trust.com/14418/ce)

Warranty : [www.trust.com/warranty](http://www.trust.com/warranty)