

Product information



A: Display	L: On/Off button
B: Subwoofer	M: LED display – displays the speakers
C: Centre speaker	N: Volume indicator
D: Surround speakers	O: IR receiver
E: Remote control	P: Power button
F: 5.1 cable	Q: Volume of the individual speaker groups
G: DIN connection cable	R: Choice between 5.1 and stereo input
H: DVD cable (x3)	S: Mute function
I: Stereo cable	T: System volume
J: Game console cable	U: Battery compartment
K: Stereo or 5.1 indicator	

Connecting the display to the subwoofer

- 1 Use the cable (G) to connect the display to the subwoofer.
Connect the subwoofer's DC-out cable to the display's (A) DC-in connection.

Connecting to a PC/MP3 player

- 2 Use the 5.1 cable (F) to connect a PC to the display (A).
Use the jack-jack cable (I) to connect an MP3 player to the display (A).
Continue from point 6 to connect the speakers.

Connecting a DVD player

- 3 Connect the DVD cables (H) to the DVD player.
Connect the 5.1 cable (F) to the front: **Green**, rear: **Black** and centre/sub: **Orange** connections on the display (A).
Continue from point 6 to connect the speakers.

Connecting a game console

- 4 Connect the game console cable (J) to a game console.
Connect the stereo cable (I) to the display's (A) stereo-in connection.
Continue from point 6 to connect the speakers.

Connecting the speakers and the power supply

- 5 Connect the front, rear and centre speakers to the subwoofer (B).
- 6 Insert the plug into a plug socket.
- 7 Turn the speaker set on.

Selecting stereo/5.1 sound

- 8 Stereo mode: in the stereo mode, the sound is divided between all the speakers and the indicator is red.

- 9 5.1 mode: all the speakers are controlled independently and the indicator is green.

Configuring 5.1 speakers in Windows XP

- 10 Click 'Start – Run'.
- 11 Type 'mmsys.cpl' and click 'OK'.
- 12 Click 'Advanced'.
- 13 Select '5.1 Surround Sound Speakers' and click 'OK'.



General information

- For the best sound quality, the subwoofer must be placed on the ground. Do not place it next to a computer monitor or a TV.
- If the subwoofer and centre speakers are switched over, change the cinch plugs on the DVD player for the centre speaker and the subwoofer or enable the sound card's Sub/Centre swap.



Energy

- The device will enter the energy saving mode when it is not used for 10 seconds. To save energy, turn the device off after use.
- If the remote control does not work or works erratically, replace the battery with a new CR2025 battery.



Troubleshooting

- Sound cannot be heard from any of the speakers.
 - Check whether the cables have been connected correctly.
 - Check whether the 5.1 mode has been selected.
 - Configure 5.1 speakers in Windows.
 - Configure 5.1 speakers in the DVD player software.

Go to <http://www.trust.com/14479> for up-to-date FAQs, drivers and instruction manuals.



Safety instructions

- This device can produce a sound of a high volume. Always increase the volume slowly.
- Never open or repair this device yourself.
- Do not swap cables whilst the device is turned on.
- Do not use the device in a damp environment. Clean the device with a dry cloth.
- Make sure nothing is placed on the cable. Do not use this device where the cable can become worn or damaged as a result of people walking over it.
- Under the following circumstances, remove the plug from the wall socket and have the device repaired by qualified personnel:
 - The cable or plug is damaged.
 - The device has been dropped or the casing is damaged.
 - The device does not work correctly.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at <http://www.trust.com/14479/ce>.

UK

Warranty & copyright

- This device has a two-year product warranty which is valid from the date of purchase. Go to www.trust.com/warranty for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.