

Product information



Speakers

- A: Subwoofer
- B: Satellite speakers (x5)
- C: Adapter

- D: Remote control
- E: 5.1 audio cable
- F: DVD player cables

UK

Installation

- 1 Connect the PC using cable E.
- 2 Connect the speakers according to the labels on the cables and position the speakers as indicated.
- 3 Connect the adapter as shown in the diagram.
- 4 Insert the adapter into a plug socket.
- 5 Turn on the switch at the rear of the subwoofer.
- 6 Use the buttons to turn on the speaker set, alter the volume and alter the bass.

Configuring 5.1 speakers in Windows XP

- 7 Click 'Start - Run'.
- 8 Type 'mmsys.cpl' and click 'OK'.
- 9 Click 'Advanced'.
- 10 Select '5.1 surround sound speakers' and click 'OK'.

Tips



Installation

- Do not switch the cables over on the back panel while the unit is turned on.
- The rear channel of some sound cards and DVD players is indicated as Surround ("Sur").
- For the best sound quality, place the subwoofer on the floor. Do not put the subwoofer next to a computer monitor or a TV.



Surround sound

- The centre speaker is only active during dialogue in DVDs with 5.1 sound and when using an MP3 player.
- If the subwoofer and centre speaker are switched, activate the sound card's sub/centre swap.
- None of the 6 speakers produce any sound whilst playing a DVD.
 - Configure 5.1 speakers in Windows (see step 8).
 - Configure 5.1 speakers in the DVD player software.
 - Check whether the cables are connected correctly to the sound card/DVD-player.
- Use the equalizer in Windows Media Player, for example, to adjust the sound (see links).



Safety instructions

- This device can produce a sound of a high volume. Always increase the volume slowly.
- Never open or repair this device yourself.

- Do not use the device in a damp environment. Clean the device with a dry cloth.
- Make sure nothing is placed on the cable. Do not use this device where the cable can become worn or damaged as a result of people walking over it.
- Under the following circumstances, remove the plug from the wall socket and have the device repaired by qualified personnel:
 - The cable or plug is damaged.
 - The device has been dropped or the casing is damaged.
 - The device does not work correctly.



Energy

- To save energy, turn the device off after use.

Links

Windows Media Player: <http://www.trust.com/mediaplayer>.

Go to www.trust.com/14572 (EU model) or www.trust.com/14573 (UK model) for up-to-date FAQs, drivers and instruction manuals.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14572/ce.



- If possible, dispose of the device at a recycling centre. Do not dispose of the device with the household waste.

Warranty & copyright

- This device has a two-year product warranty which is valid from the date of purchase. Go to www.trust.com/warranty for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.