

Product information

A: Scroll-wheel, third mouse button and Battery-low indicator LED.

Flashing LED: Battery empty.

Lit steady LED: Battery Charging.



B: Right mouse button

C: Left mouse button

D: Browser backward button

E: Browser forward button (backside)

F: Office helper button

G: Connect button Mouse

H: Wireless channel Switch (inside battery compartment)

I: Battery compartment

J: Connect button Cradle and Status indicator LED

Flashing LED: Mouse active

Lit steady LED: Power

K: USB to PS/2 converter

L: Power adapter

UK

Installation


- Insert batteries

- 1 - Connect power adapter to cradle
- Charge batteries

2 PC off

- 3 **A:** Connect USB or
B: use USB to PS/2 converter

PC on

- 4  Windows 98SE follow onscreen instructions to finish!


- 5 Press connection button Cradle; Status LED flashing

- 6 Press connection button Mouse → Mouse is connected

Install Driver

- 7 Place CD in CD-ROM

Click "Install Driver"; Follow on screen instructions to finish

- 8  Restart system when prompt!

- 9 Click "Continue anyway" 2x (Only in Windows XP Service Pack 2 and Higher)


- 10 Click "Finish"

After reboot, mouse is ready to Use

Use Tilt and Office button

 
- 11 Activate horizontal(tilt) scroll by moving the scroll wheel sideways . Move up and down for normal scroll function.
- 12 Click office helper button to launch a desired office application and click again to use popular commands in the opened application.

Reminders

 Less performance

- Metal object close to or in between the device and PC → Remove object.

- Shiny or transparent surface material which may cause sensor imprecision → Use a mousepad.
- Interference with other devices. → Move channel switch inside battery compartment to second channel and repeat step 5 and 6.
- Batteries empty. → Recharge.

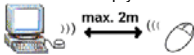

General usage

- Adjust the speed of mouse pointer: (1) Open Windows Help (Start → Help). (2) Search “adjust the speed of mouse pointer”. (3) Follow instructions
- Read the manual on CD for the use of the configuration program
- Install Trust Easy Mouse Configuration software on CD to configure the 3rd, 4th and 5th button and use tilt scroll.

Power

- Keep mouse on cradle no longer than 48 hours.
- Do not attempt to recharge alkaline batteries. There is a danger of them exploding.
- Device will go into sleep mode after 10 minutes. Wake up by clicking any button.

If you have any problems, go to www.trust.com/14646 (14647, UK model) for FAQ, software and manuals
For extensive service register at www.trust.com/register.

Safety

- Do not open or repair this device.
- Never use the device in a damp environment. Clean the device with a dry cloth.
- Never throw the batteries onto an open fire. The batteries may explode.
- Use only rechargeable NiMH batteries with this product.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14646/ce or www.trust.com/14647/ce (UK model)



- If possible, dispose of the device at a recycling centre. Do not dispose of the device with the household waste.

Wireless

- This wireless device works at a frequency of 27MHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in EU countries plus: EU candidates and NO/CH/RU/HR/IS-UA. There are no limitations per channel for the above-mentioned countries. Go to www.trust.com/14646 for an updated list of the countries where the use of this device is permitted.
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets local regulations. Frequency: 27.045 or 27.095MHz, Bandwidth: 50KHz, Power: < 1mW.
- Nowadays, there are an increasing number of wireless products (video, audio, computer, etc.) which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this product is limited by or is limiting for other wireless products. This can only be avoided by paying attention to the distance between products and, where possible, by changing channels.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

Warranty & copyright

- This product has a two-year manufacturer's warranty which is effective from the date of purchase. For more information see www.trust.com/warranty
- Reproduction of this manual or any part of it is prohibited without permission from Trust International B.V.