

Connector	Pin out	Where To																								
	<p>1 13</p> <table border="0"> <tr><td>+3.3V</td><td>+3.3V</td></tr> <tr><td>+3.3V</td><td>J12V</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>+5V</td><td>PS_ON#</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>+5V</td><td>COM</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>PWR_ON</td><td>NC</td></tr> <tr><td>+5VSB</td><td>+5V</td></tr> <tr><td>+12V1</td><td>+5V</td></tr> <tr><td>+12V1</td><td>+5V</td></tr> <tr><td>+3.3V</td><td>COM</td></tr> </table>	+3.3V	+3.3V	+3.3V	J12V	COM	COM	+5V	PS_ON#	COM	COM	+5V	COM	COM	COM	PWR_ON	NC	+5VSB	+5V	+12V1	+5V	+12V1	+5V	+3.3V	COM	<p>ATX12V v2</p>
+3.3V	+3.3V																									
+3.3V	J12V																									
COM	COM																									
+5V	PS_ON#																									
COM	COM																									
+5V	COM																									
COM	COM																									
PWR_ON	NC																									
+5VSB	+5V																									
+12V1	+5V																									
+12V1	+5V																									
+3.3V	COM																									
	<table border="0"> <tr><td>Pin 1</td><td>Pin 11</td></tr> <tr><td>+3.3VDC</td><td>+3.3VDC</td></tr> <tr><td>+3.3VDC</td><td>-12VDC</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>+5VDC</td><td>PS_ON#</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>+5VDC</td><td>COM</td></tr> <tr><td>COM</td><td>COM</td></tr> <tr><td>PWR_OK</td><td>-5VDC</td></tr> <tr><td>+5VSB</td><td>+5VDC</td></tr> <tr><td>+12VDC</td><td>+5VDC</td></tr> </table>	Pin 1	Pin 11	+3.3VDC	+3.3VDC	+3.3VDC	-12VDC	COM	COM	+5VDC	PS_ON#	COM	COM	+5VDC	COM	COM	COM	PWR_OK	-5VDC	+5VSB	+5VDC	+12VDC	+5VDC	<p>ATX12V ATX2.03</p>		
Pin 1	Pin 11																									
+3.3VDC	+3.3VDC																									
+3.3VDC	-12VDC																									
COM	COM																									
+5VDC	PS_ON#																									
COM	COM																									
+5VDC	COM																									
COM	COM																									
PWR_OK	-5VDC																									
+5VSB	+5VDC																									
+12VDC	+5VDC																									
	<table border="0"> <tr><td>Pin 1</td><td>Pin 3</td></tr> <tr><td>COM</td><td>+12VDC</td></tr> <tr><td>COM</td><td>+12VDC</td></tr> </table>	Pin 1	Pin 3	COM	+12VDC	COM	+12VDC																			
Pin 1	Pin 3																									
COM	+12VDC																									
COM	+12VDC																									
	<table border="0"> <tr><td>Pin 1</td><td>+12VDC</td></tr> <tr><td></td><td>COM</td></tr> <tr><td></td><td>COM</td></tr> <tr><td>Pin 4</td><td>+5VDC</td></tr> </table>	Pin 1	+12VDC		COM		COM	Pin 4	+5VDC																	
Pin 1	+12VDC																									
	COM																									
	COM																									
Pin 4	+5VDC																									
	<table border="0"> <tr><td>Pin 1</td><td>+5VDC</td></tr> <tr><td></td><td>COM</td></tr> <tr><td></td><td>COM</td></tr> <tr><td>Pin 4</td><td>+12VDC</td></tr> </table>	Pin 1	+5VDC		COM		COM	Pin 4	+12VDC																	
Pin 1	+5VDC																									
	COM																									
	COM																									
Pin 4	+12VDC																									

Refer to the manual of motherboard, peripheral, drive or interface card for correct power connection!