

Windows 8

A

B

C

D 2x

E

Microphone Properties - Levels

Microphone: 100

Microphone Boost: +30.0 dB

OK Cancel Apply

Windows 7/Vista

A

B

C 2x

D

Open Volume Mixer

Playback Devices

Recording Devices

Sounds

Sound - Recording

Select a recording device below to modify its settings:

Microphone
High Definition Audio Device
Working

Microphone Properties - Levels

Microphone: 100

Microphone Boost: -30.0 dB

OK Cancel Apply

Frequently Asked Questions


<http://www.trust.com/17405/faq>

© 2015 Trust International B.V. - All rights reserved
Laan van Barcelona 600
3317DD, Dordrecht, NL




Primo Webcam

1. Connect webcam

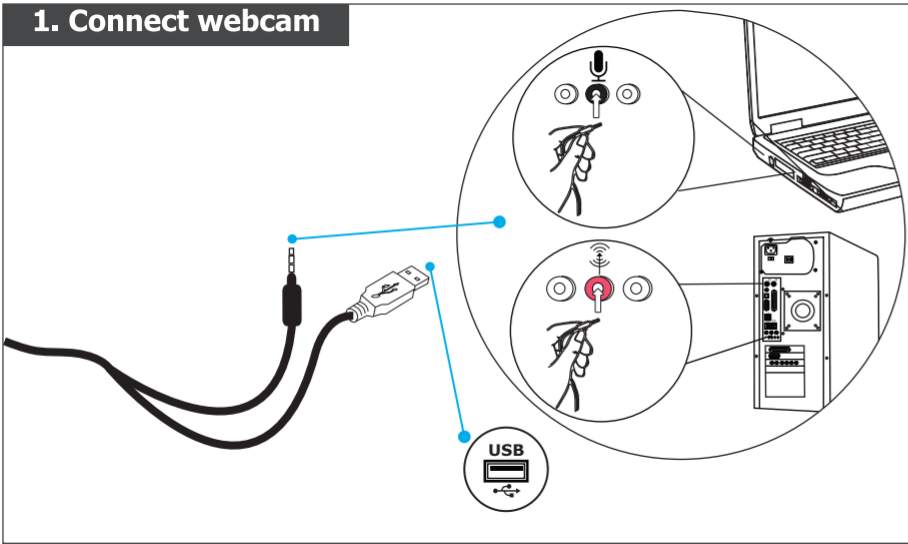

2. Focus

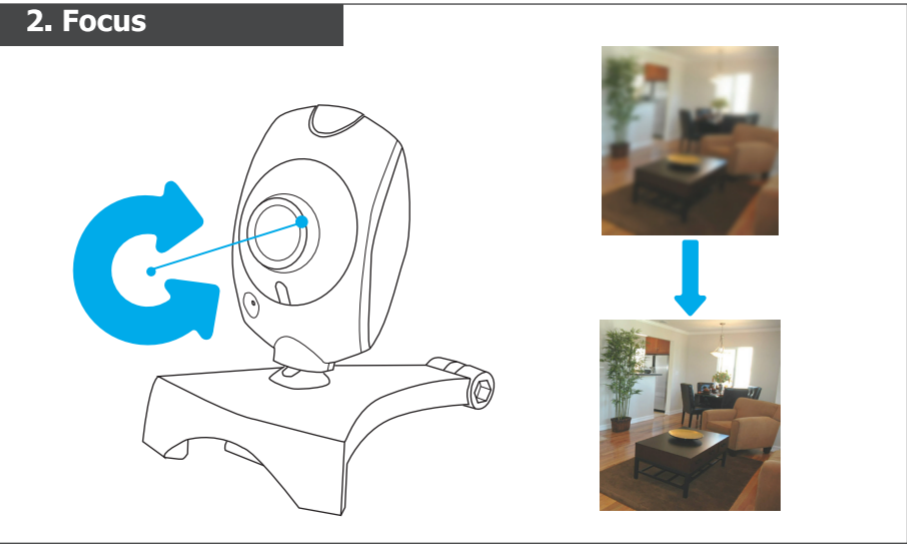

Windows 10

A series of four screenshots from Windows 10 showing the steps to configure a webcam's microphone. Step A shows the system tray icon for sound. Step B shows the 'Recording devices' menu option. Step C shows the 'Sound' control panel window with the 'Recording' tab selected and the 'Microphone' device highlighted. Step D shows the 'Microphone Properties' dialog box with the 'Levels' tab selected, the volume slider set to 100, and the 'OK' button highlighted. Pills are used as markers for each step: A (one pill), B (two pills), C (two pills with a '2x' multiplier), and D (one pill).