




 





 




















 












Multimedia Key Sheet
Wireless keyboard for iPad

EN	IT	NL	DE	FI	FR	ES	SE	PL	CZ	BR	RU
Homescreen	Schermata iniziale	Beginscherm	Home-Bildschirm	Aloitusnäyttö	Homescreen	Pantalla de inicio	Hemskärm	Ekran domowy	Domáci obrazovka	Tela inicial	Начальный экран
Search	Cerca	Zoeken	Suchen	Haku	Rechercher	Búsqueda	Sök	Znajdź	Hledat	Buscar	Поиск
Decrease brightness	Riduzione luminosità	Helderheid verlagen	Dunkler	Vähennä kirkkautta	Baisser la luminosité	Reducir brillo	Minska ljusstyrkan	Zmniejsz poziom jasności	Snížení jasu	Reduzir brilho	Уменьшение яркости
Increase brightness	Aumento luminosità	Helderheid verhogen	Heller	Lisää kirkkautta	Augmenter la luminosité	Aumentar brillo	Öka ljusstyrkan	Zwiększ poziom jasności	Zvýšení jasu	Aumentar brilho	Увеличение яркости
Picture frame	Cornice d'immagine	Fotolijst	Bildrahmen	Kuvakehys	Cadre	Marco de la imagen	Fotoram	Ramka na zdjęcia	Rámeček obrazu	Moldura	Рамка для фотографии
Display on-screen keyboard	Visualizza tastiera su schermo	On-screen toetsenbord weergeven	Anzeigen der Bildschirmstastatur	Näytä näppäimistö näytöllä	Affichage du clavier sur l'écran	Mostrar el teclado en pantalla	Visa skärmtangentbord	Wyświetl klawiaturę ekranową	Zobrazí klávesnici na obrazovce	Exibir o teclado na tela	Отобразить экранную клавиатуру
Previous track	Traccia precedente	Vorige nummer	Vorheriger Titel	Edellinen raita	Piste précédente	Pista anterior	Föregående spår	Poprzednia ścieżka	Předcházející stopa	Faixa anterior	Предыдущая дорожка
Play / Pause	Riproduci / Pausa	Afspelen/pauzeren	Wiedergabe/Pause	Toista/Tauko	Lecture/Pause	Reproducir/Pausa	Uppspelning/paus	Odtwarzanie/Pauza	Přehrář/pozastavit	Reproduzir/Pausar	Воспроизведение/Пауза
Next track	Traccia successiva	Volgende nummer	Nächster Titel	Seuraava kappale	Suivant	Pista siguiente	Nästa spår	Następna ścieżka	Další stopa	Próxima faixa	Следующая дорожка
Mute	Muto	Dempen	Stummuschaltung	Mykistys	Muet	Silencio	Ljud av	Wyciszenie	Ztlumit	Modo silencioso	Отключение звука
Volume down	Diminuisci volume	Volume omlaag	Leiser	Vähentää äänenvoimakkuutta	Baisse du volume	Disminuir el volumen	Sänk volymen	Zmniejszanie głośności	Snížit hlasitost	Abaixar volume	Уменьшение громкости
Volume up	Aumenta volume	Volume omhoog	Lauter	Lisää äänenvoimakkuutta	Augmenter le volume	Aumentar el volumen	Höj volymen	Zwiększanie głośności	Přidání hlasitosti	Aumentar volume	Увеличение громкости
Lock	Blocco	Vergrendelen	Sperren	Lukitus	Verrouiller	Bloquear	Lås	Zablokuj	Zámek	Bloquear	Блокировка

RO	HU	BG	EL	PT	NO	DA	TR	SK	SL	HR	RS
 Ecran de pornire	 Kezdőképernyő	 Начален екран	 Αρχική οθόνη	 Ecrã principal	 Hjemskjerm	 Hjemmeskærm	 Ana Ekran	 Domáca obrazovka	 Domači zaslon	 Domaći ekran	 Početni ekran
 Căutare	 Keresés	 Търсене	 Αναζήτηση	 Procurar	 Søk	 Søg	 Ara tuşu	 Hľadať	 Iskanje	 Pretraga	 Pretraga
 Reducerea luminozității	 Fényerő csökkentése	 Намаляване на яркостта	 Μείωση φωτεινότητας	 Diminuir brilho	 Reduser lysstyrke	 Formindsk lysstyrke	 Parlaklığı azalt	 Zníženie jasu	 Zmanjšaj svetlost	 Smanji svjetlinu	 Smanji osvetljenje
 Creșterea luminozității	 Fényerő növelése	 Увеличаване на яркостта	 Αύξηση φωτεινότητας	 Aumentar brilho	 Øk lysstyrke	 Forøg lysstyrke	 Parlaklığı arttır	 Zvýšenie jasu	 Povečaj svetlost	 Povečaj svjetlinu	 Povečaj osvetljenje
 Ramă pentru fotografie	 Képerkeret	 Рамка за снимки	 Πλαίσιο Εικόνας	 Moldura	 Bilderamme	 Billedramme	 Resim Çerçevesi	 Fotorámik	 Okvir slike	 Okvir za slike	 Okvir za sliku
 Afșare tastatură vizuală	 Képernyő-billentyűzet megjelenítése	 Визуализиране на екранна клавиатура	 Εμφάνιση πληκτρολογίου οθόνης	 Visualizar teclado no ecrã	 Vis skjermtastatur	 Vis tastatur på skærm	 Ekran klavyesini göster	 Zobrazenie obrazovkovej klávesnice	 Prikaži zaslonsko tipkovnico	 Prikaži tipkovnicu na ekranu	 Prikaz tastature na ekranu
 Melodia anterioară	 Előző szám	 Предишна писта	 Προηγούμενο κομμάτι	 Faixa anterior	 Forrige spor	 Forrige nummer	 Bir önceki kayıt izi	 Predchádzajúca stopa	 Prejšnja skladba	 Prethodni zapis	 Prethodna pesma
 Redare/Întrerupere	 Lejátszás / Szünet	 Възпроизвеждане/ Пауза	 Αναπαραγωγή/Παύση	 Play/Pause	 Spill av/Pause	 Afspil/Pause	 Yürüt/Duraklat	 Prehrávanie/pozastavenie	 Predvajanje/pavza	 Pokrenite / zaustavite	 Reprodukcija / Pauza
 Melodia următoare	 Következő szám	 Следваща писта	 Επόμενο κομμάτι	 Faixa seguinte	 Neste spor	 Næste nummer	 Bir sonraki kayıt izi	 Ďalšia stopa	 Naslednja skladba	 Sljedeći zapis	 Sledeća pesma
 Mut	 Némítás	 Изключване на звука	 Σίγαση	 Silenciar	 Demp	 Lyd fra	 Sessiz	 Stlmiť	 Nemo	 Prigušeno	 Prigušeno
 Reducere volum	 Hangerő csökkentése	 Намаляване силата на звука	 Μείωση έντασης ήχου	 Baixar o volume	 Volum ned	 Lydstyrke ned	 Sesi azalt	 Znížiť hlasitosť	 Glasnost dol	 Stišaj glasnoću	 Smanji ton
 Intensificare volum	 Hangerő növelése	 Увеличаване силата на звука	 Αύξηση έντασης	 Aumentar volume	 Volum opp	 Lydstyrke op	 Ses artirma	 Pridanie hlasitosti.	 Glasnost gor	 Pojačaj glasnoću	 Pojačaj ton
 Blocare	 Zár	 Заключване	 Κλείδωμα	 Bloquear	 Lås	 Lås	 Kilitle	 Zablokovanie	 Zakleni	 Zaključaj	 Zaključaj