

5. PLAY MUSIC SD-CARD

1

2

PRESS & HOLD

PRESS 1X

MICRO SD

*not included

SUPPORTED FILETYPES: MP3, WMA, WAV

SUPPORTED CARDS: MICRO-SD/SDHC FORMAT: FAT32

6. WIRED - SETUP

1

2

3

7. PHONE CALL

RESET SPEAKER

Error ?

Reset

FAQ

FREQUENTLY ASKED QUESTIONS

[HTTP://WWW.TRUST.COM/20889/FAQ](http://www.trust.com/20889/FAQ)

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, NL

© 24-02-2017 Trust All rights reserved.

Trust
URBAN

USER GUIDE
WIRELESS SPEAKER

VELTUS

1. CHARGING

1. Plug the USB cable into the device.

2. Connect the other end of the USB cable to a power source (e.g., laptop).

Battery Level Indicator:

- 60% - 100%
- 30% - 60%
- 0% - 30%

3H

*not included

2A. WIRELESS - SETUP

1. 2 sec.

2. 2 sec.

○ Pairing mode

● Paired

2B. WIRELESS - SETUP

1. Settings

2. Bluetooth

3. UR SPK-24

WIRELESS - TROUBLESHOOTING

no devices found

2 sec.

UR SPK-24

4. PLAY MUSIC WIRELESS

Camera button iOS

PRESS & HOLD

PRESS 1X