




5. WIRED SETUP

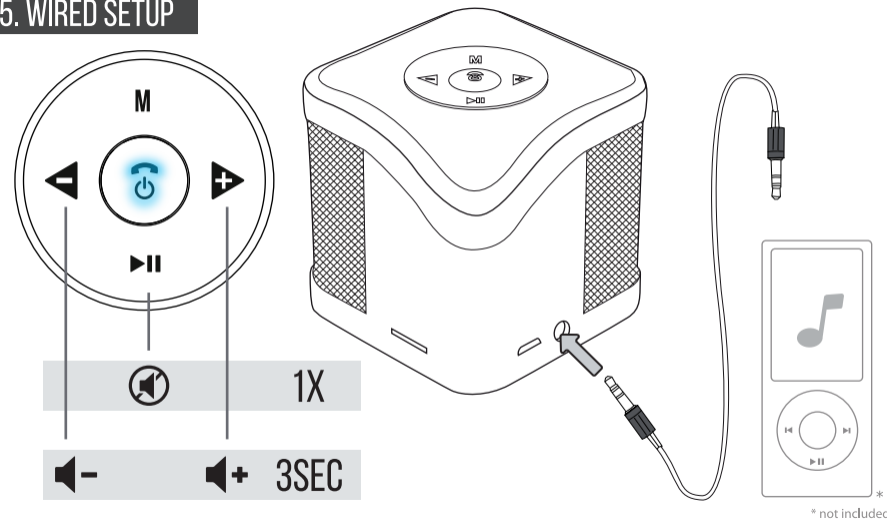

6. PLAY SD CARD

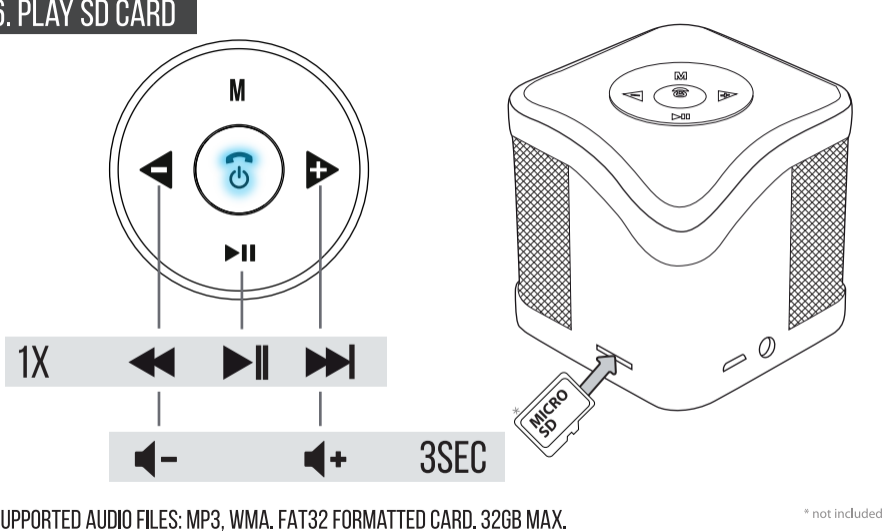

7. PHONE CALL

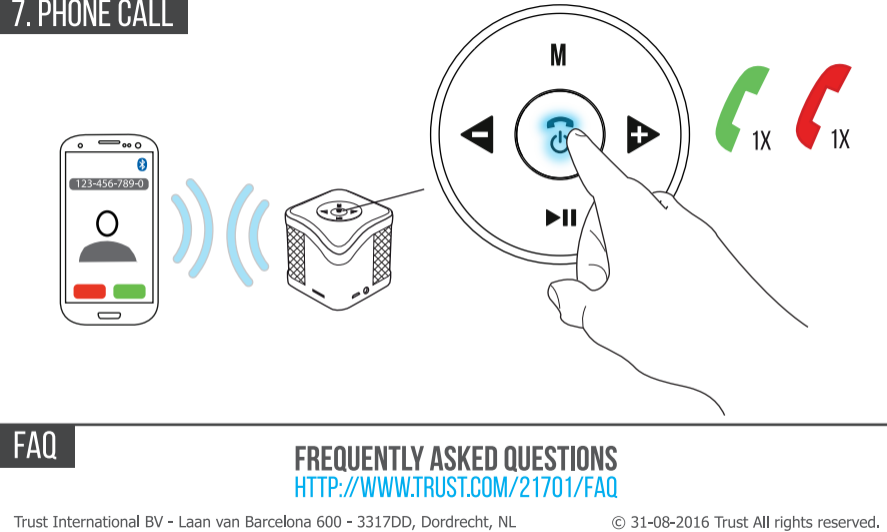


Trust
URBAN




USER GUIDE
WIRELESS SPEAKER

1. CHARGE SPEAKER

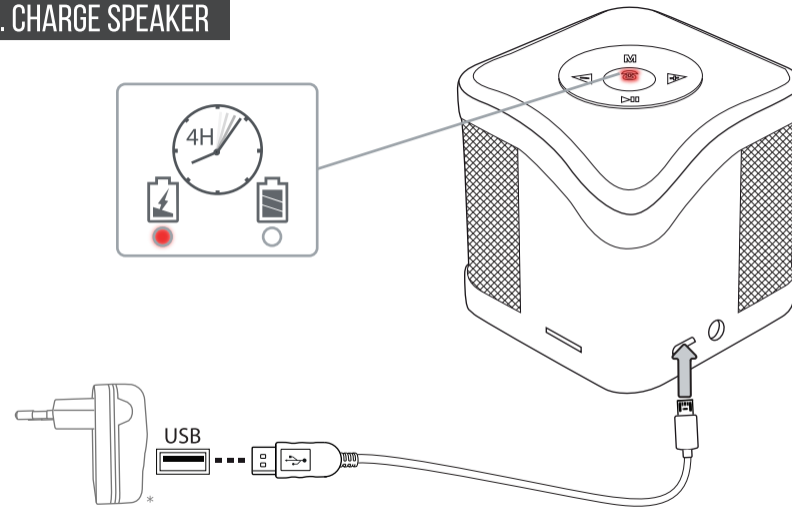


* not included

2. WIRELESS SETUP 1/2

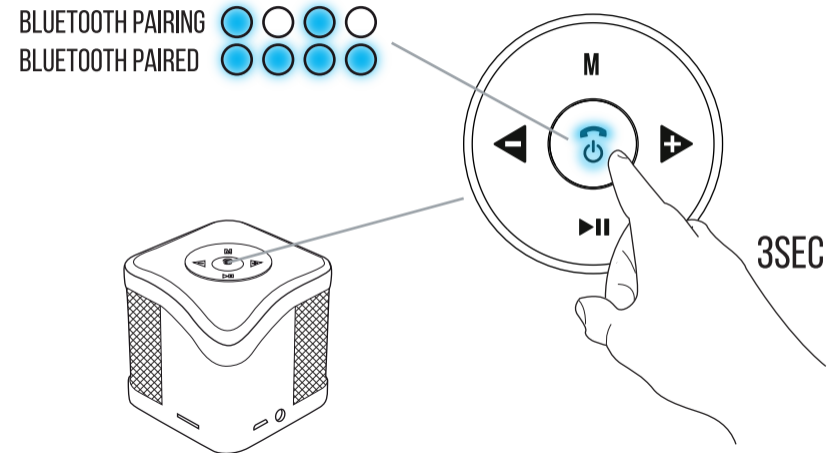


3SEC

3. WIRELESS SETUP 2/2

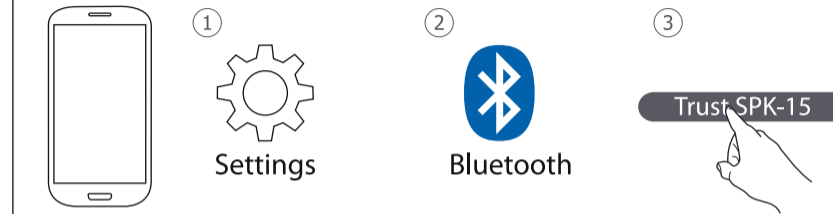

WIRELESS TROUBLESHOOTING

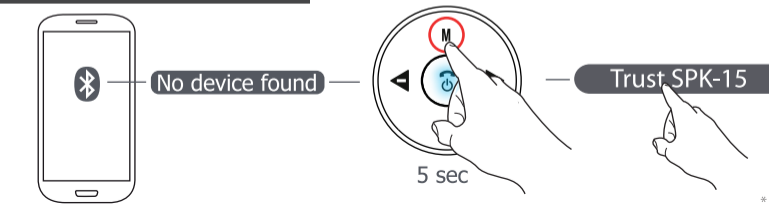

5 sec

* not included

4. PLAY MUSIC WIRELESS

