

1. Having fun with photos!

Capture still images with FlexC@m and archive a wide range of dazzling special effects with easy-to-use photo retouching tools. The included software is easy to learn, and your photo editing skills will grow quickly. You'll be able to make your own professional-looking calendars, greeting cards, invitations, posters and much, much more. The possibilities with the FlexC@m are endless!



2. Package Contents

Please check the contents of the package before reading the instruction manual. It should contain the following:

- FlexC@m
- USB cable
- CD-ROM with drivers and software
- This quick user manual

If anything is missing or damaged, please contact one of the Trust Care Centres. You can find more information at the back of this instruction manual.

3. What can you do with your FlexC@m?

1. **Scan pictures:** Capture photos and images with the touch of a button. Easily create albums or send video e-mail.
2. **Scan documents:** Instantly acquire and file documents, articles and clippings for use at home or in the office.
3. **Scan 3-D objects:** Acquire 3-D objects beyond the limitations of a scanner: gifts, collectibles, product samples, etc.
4. **Videoconferencing:** Use videoconferencing software such as NetMeeting to talk to family and friends over the Internet.
5. **Video e-mail:** Use the video e-mail software provided, VideoLive Mail, to send more personalised e-mail to family, friends and clients.
6. **And more...:** Image editing: photo fun, photo album, calendar, post cards, web design, Video guard etc.

4. FlexC@m Installation

Thank you for purchasing the FlexC@m. This guide will walk you through the steps on how to install your FlexC@m onto your computer system.

Note: *The FlexC@m works with Windows 98/ME/2000 only*

Before you begin, please make sure your computer is turned off.

4.1 Hardware Installation

For the fastest and easiest installation of your FlexC@m, we suggest NOT to connect your USB camera until prompted to do so by the FlexC@m Manager driver installation.

1. Place the CD into your CD-ROM and click on the FlexC@m Manager icon to begin the installation. If the CD does not automatically display the screen below, simply go to "Start" then "Run" and select the path "D:\Setup.exe". You may replace "D" with the corresponding letter of your CD-ROM drive.



Figure 1: Installer

2. The welcome screen appears, click "Next".
3. The CD will begin installing the driver to the proper location.
4. Installation will prompt you to plug in your USB camera.
5. Connect the FlexC@m USB connector into an available USB port on your computer.
6. Windows will detect your newly installed FlexC@m and will proceed with the final steps of the installation.
7. You have now successfully installed your FlexC@m USB camera!

4.2 Software Installation

- Once your FlexC@m is installed, you may continue installing the rest of the software included.
- Click on the icon of the program you wish to install (figure 1) and follow the on-screen instructions for each of the programs.
- You are now ready to begin having fun using your Trust FlexC@m camera.

5. Using FlexC@m Manager

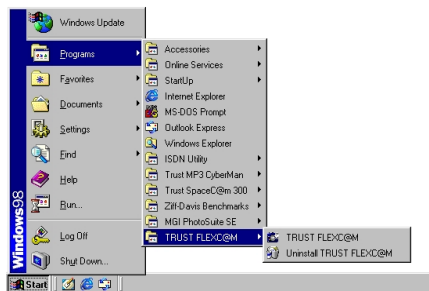


Figure 2: FlexC@m Manager

- To start using your FlexC@m Manager, simply click on the "Start" menu and go up to "Programs" then go to the folder named "TRUST FLEXC@m" and click on "TRUST FLEXC@m". This is the program that will allow you to begin using your camera.
- Or you can press the FlexC@m hardware snapshot button (figure 3) any time to start "FlexC@m Manager".



Figure 3: FlexC@m hardware snapshot button

6. Taking Snapshots

With FlexC@m, taking still snapshots is as easy as a click of a button. You can send your photos over the Internet, import them into documents, enhance them using a photo editor, or even print them in full, rich colour.

1. Open FlexC@m Manager.
2. Focus the camera on a subject. To focus the camera, turn the dial located at the middle of the camera.



Figure 4: Taking snapshots

3. Taking snapshots



- **S/W Snapshots:** Click the "Snapshot" button to take a snapshot.



- **H/W Snapshots:** Directly press the H/W snapshot button on the FlexC@m.

4. Once you have taken a snapshot, the album thumbnail window (figure 5) will appear.



Figure 5: Album thumbnail window

- You can save your photos to disk by selecting the thumbnail and clicking the "Save As" item.
- You can change the photo editing program by clicking the "Transfer to..." item
- You can transfer still images to a photo editing program by selecting the thumbnail and clicking the "Transfer" button.