

Product information



- | | | | |
|---|---------------------------|----|-------------------------|
| 1 | Charge connection | 6 | Ear plug |
| 2 | "+" button | 7 | Microphone |
| 3 | "-" button | 8 | Ear clip |
| 4 | Function indicator (blue) | 9 | Charge indicator (red) |
| 5 | Battery indicator (red) | 10 | Power indicator (green) |

UK

Installation

- 1 FULLY charge before use! 2 ~ 4 hours. ⚠ Batteries full: red charge indicator (9) will go out.
- 2 Activate the *pairing* mode: press "+" button for 8 seconds → blue + red indicators will flash alternately.
- 3 To make a telephone call: **activate** Bluetooth and **search** for Bluetooth devices (the headset must still be flashing for it to be detectable).
- 4 Bluetooth device(s) found: select "Trust BT220".
- 5 PIN code = **1234**. It may be possible to enter or alter the name of the headset.
Press **Connect**.
- 6 Place the headset on your ear (either the left or right ear).
- 7 To answer an incoming call: press the "+" button.
- 8 Adjust the volume. Other functions: see the table.
- 9 To end a telephone call: press the "-" button for 3 seconds.

General method for pairing the headset with another Bluetooth (BT) device

Headset

1. Activate the *pairing* mode:
- 2.
- 3.
- 4.
- 5.
- 6.
7. (Sometimes you will have to press the "+" button to activate the connection.)
8. To disconnect: press the "+" button for 3 sec.

Other Bluetooth device

- (Press "+" button for 8 sec.)
 Search for new BT devices.
 Headset found.
 Select/activate the headset.
 Enter the PIN code (1234).
 The connection will be created.

Button functions and indicators

(The numbers between brackets refer to the product information diagrams.)

Charger + charger plug

Status	Indicators	
	Green (10)	Red (9)
Power	On	
Charging the battery	On	On
After charging: battery full	On	Off

Headset

Status	Buttons		Result	Headset indicators		Headset
	'+' (2)	'-' (3)		Blue (4)	Red (5)	Signal (6)
Off	4 sec.		On	Flashes	-	Low + high tone
On	3 - 6 sec.		Off	-	Flashes quickly	High + low tone
Off	8 sec.		On + <i>pairing</i> mode	Flash alternately		Low + high tone (x2)
On + battery almost empty			(Recharge!)		Flashes	
Power connected (1)			Turned off and will be recharged	-	-	-
Incoming call	Press quickly		Answer incoming call			Ring tone -> answer call
		3 sec.	Refuse call			Ring tone -> -
Busy with call	Press quickly		Increase the volume			Tone
		Press quickly	Decrease the volume			Tone
		3 sec.	End call or accept other call			Tone
		Press both buttons quickly at the same time		Turn off microphone (mute)		
Mute	Press both buttons quickly at the same time		Mute turned off			Tone
Busy with call on headset	3 sec.		Call transferred from headset to telephone (headset is not turned off!)			Tone

Status	Buttons		Result	Headset indicators		Headset
	'+' (2)	'-' (3)		Blue (4)	Red (5)	Signal (6)
Busy with call on telephone	Press quickly		Call transferred from telephone to headset			Tone
Telephone + headset on without a call	Press quickly		Speak assignment for the telephone (must support the telephone)			Tone


UK

⚠ NOTE!



Pairing and use

- The headset will ONLY work if the Bluetooth (BT) connection has been *paired* correctly.
- The headset can only be used with BT devices which support the *Headset Protocol* (HP) or the *HandsFree Protocol* (HFP).
- The *pairing* mode only remains active for 2 - 3 minutes. If necessary, reactivate the pairing mode (turn the headset off first).
- After a successful BT connection, it will not be necessary to *pair* the devices again, even after they have been turned off. However, if one of the devices has been *paired* with another, similar, BT device, they will usually have to be *paired* again.
- The method of pairing and the use of BT can differ for different devices. See the instruction manual provided with your other BT device for the correct method.
- The original ring tone of the telephone can only be heard via this headset if it is a *polyphonic* ring tone and the telephone supports the transfer of this ring tone to a BT headset. If not, you will hear a standard ring tone via the headset.
- Some telephones disconnect the BT connection if the headset is turned off. In that case, you will no longer hear the telephone ring via the headset. Solution: press the "+" button for 1 sec. to reactivate the connection.
- With some telephones, the "+" button must be pressed for 2 sec. to accept a call (e.g. Sony Ericsson P800/900).
- Some telephones are produced without optimal BT support. If you have a problem, check whether the telephone has the most up-to-date BT version (*firmware*). Contact the telephone manufacturer for more information.
- An up-to-date list of telephones that can be used with this headset is available at: www.trust.com/14219/compatibility.
- The PIN code (1234) cannot be changed.

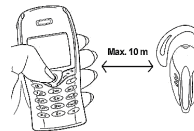

)))

Bad wireless connection

- There are metal objects close to or between the headset and the other BT device.
- The battery is (almost) empty (the red indicator on the headset flashes).
- The other BT device has a smaller range (e.g. BT class 3: max. 1 metre).
- There is another wireless device close by (such as a wireless video or wireless network).



Battery

- It is recommended to always fully charge the battery (until the charge indicator goes out).
- A fully charged battery has a call time of 5 hours and a standby time of 100 hours.
- It may take a while before the red charge indicator goes out. In particular, this may occur if the headset has not been used for some time.
- The headset is always turned off when the battery is recharged.
- It is possible that the headset cannot be turned on after the battery has been recharged for only 20 minutes. The battery must then be recharged for at least 40 minutes.
- Recharge the battery at least every 2 months if the headset is not used for a long period of time.
- Usage temperature: -10° C ~ 55° C. At a lower temperature, the battery will become empty more quickly.
- The battery is built into the headset and cannot be replaced.
- The headset is charged via a 5 V power supply. The internal voltage of the headset is 3.7 V.
- If you dispose of the headset, observe the applicable guidelines regarding the disposal of the Li-ion battery.

Go to www.trust.com/14219 for up-to-date FAQs, instruction manuals and more information on Bluetooth.

Safety instructions

- Never open or repair this device yourself.
- Do not use this device in a damp area, such as a bathroom, damp basement or swimming pool.
- Clean the device with a dry cloth.



This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14219/ce.

Wireless

- This wireless Bluetooth device works at a frequency of 2.4 GHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC. It is a Class 1 wireless device and may be used in all EU countries. See www.trust.com/14219 for an up-to-date list of countries where the use of this product is permitted. (Note: this class indication is not the BT class.)
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets the local regulations. Frequency: 2.4 - 2.4835 GHz; Bandwidth: approx. 1 MHz; Power: 1 mW.
- Nowadays, there are an increasing number of wireless products (video, audio, computer, etc.) which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this device is limited by or is limiting for other wireless devices. This can only be avoided by paying attention to the distance between devices and, where possible, by changing the channels of the other devices.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

Warranty & copyright

- This device has a two-year product warranty which is valid from the date of purchase. Go to www.trust.com/warranty for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.